

### ASSEMBLY INSTRUCTIONS

#### STEP 1

Before deconstructing in order to easily transport the KIO Tinker, clear floor space to allow the unit to separate.

#### STEP 2

Remove all shelves inside and outside the unit.




#### STEP 3A

Locate and loosen the cam bolts (16 total) located near the tinker tabletop.



#### STEP 3B

To loosen cams, unscrew the cam lock from the cam bolt to unlock it.

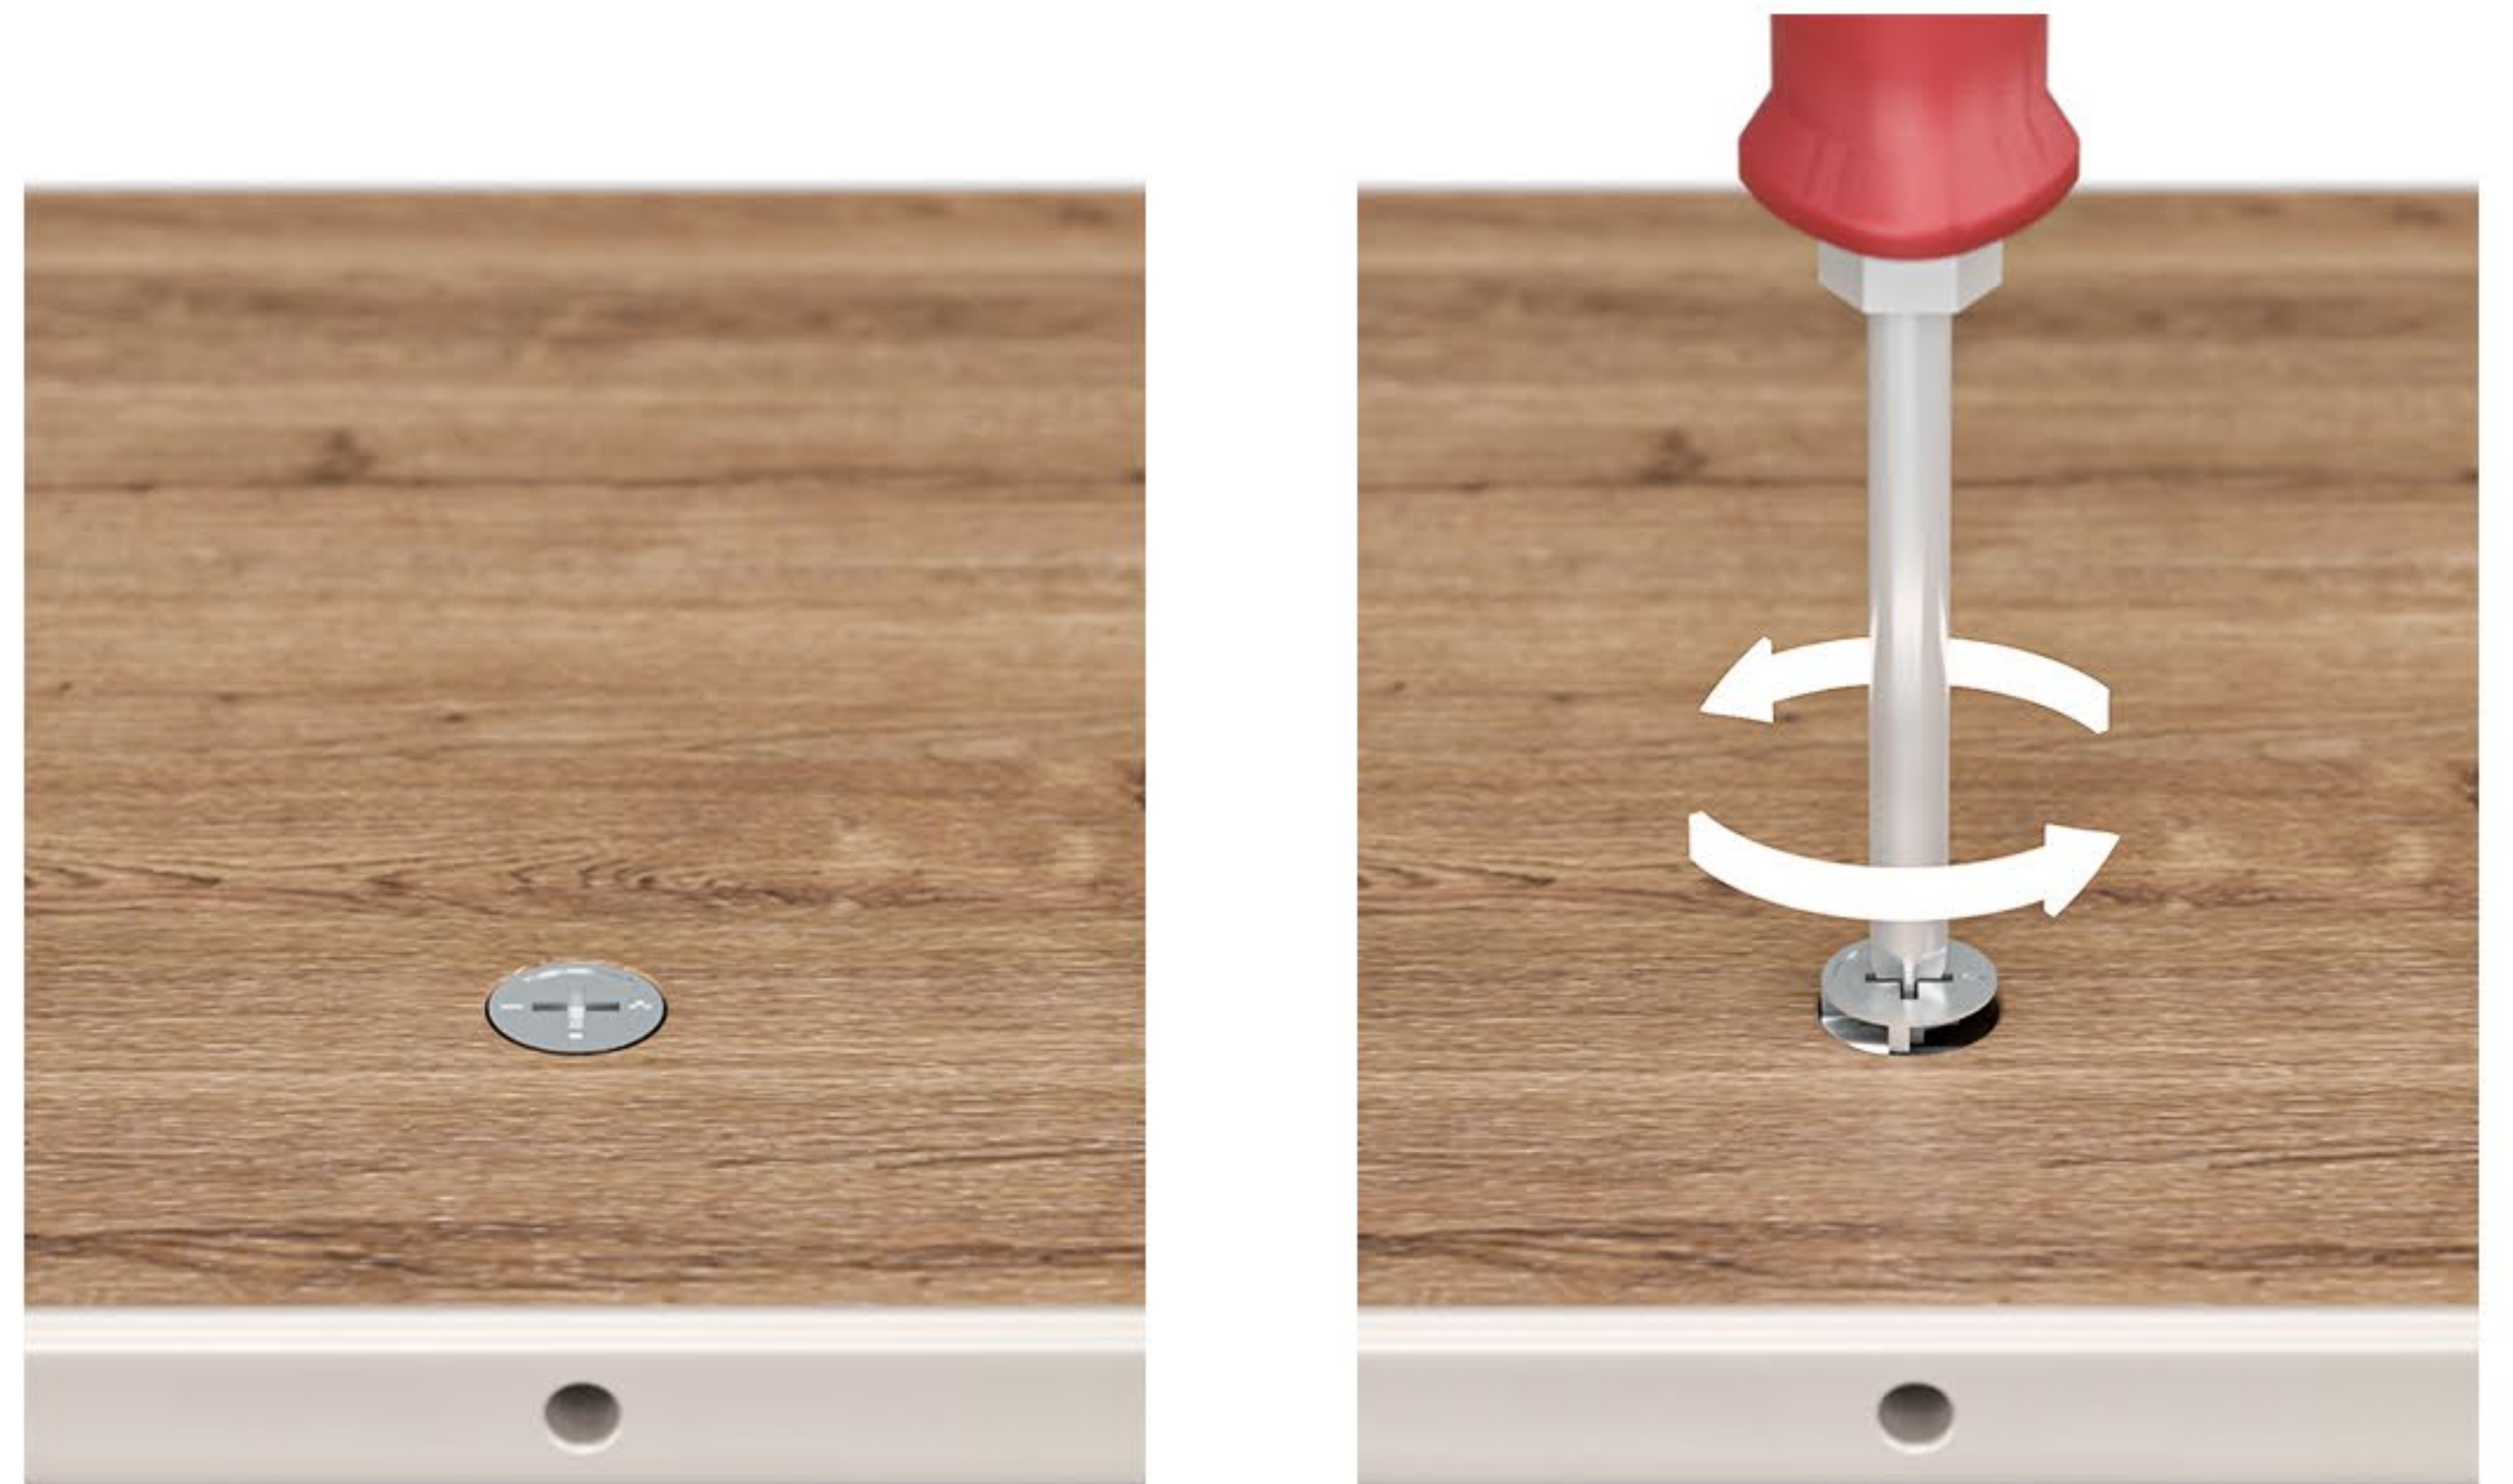

#### STEP 4

Once all cams are loose, use upward force to separate the bookshelf tabletop from the unit.



#### STEP 5

Locate and remove the hardware (4-bolts) attached to the inner partition.



#### STEP 6

After removing the hardware, pull and separate the unit for easy transport.



#### STEP 7

**Re-assembling the KIO Tinker.**

- Align the inner partition inserts and screw in hardware using an allen key.
- Attach adjustable shelves back onto the unit.
- Align the cam bolts and dowel rods to the pilot holes in the top of the KIO Tinker Base. Once aligned, push down with adequate force to replace the tabletop.
- Tighten the cam locks with a screwdriver to secure the tabletop to the unit.

#### STEP 8

If you have any questions, please contact MiEN Environments at **616-818-1970**