

STEP 1

Make sure that the following hardware and/or components are present before beginning assembly.


* **ITEMS LISTED BELOW IN RED ARE FOUND IN THE RED HARDWARE BOX PICTURED BELOW. IF THIS BOX IS MISSING PLEASE CALL MIEN FOR ASSISTANCE. 616-818-1970**

- SST tabletop
- Base
- (6x) scratch guards
- (8x) 1/4-20 x 5/8 bolts




STEP 2

Carefully place the tabletop upside down (on a padded surface such as cardboard or foam to avoid damaging the surface) to expose the metal inserts.

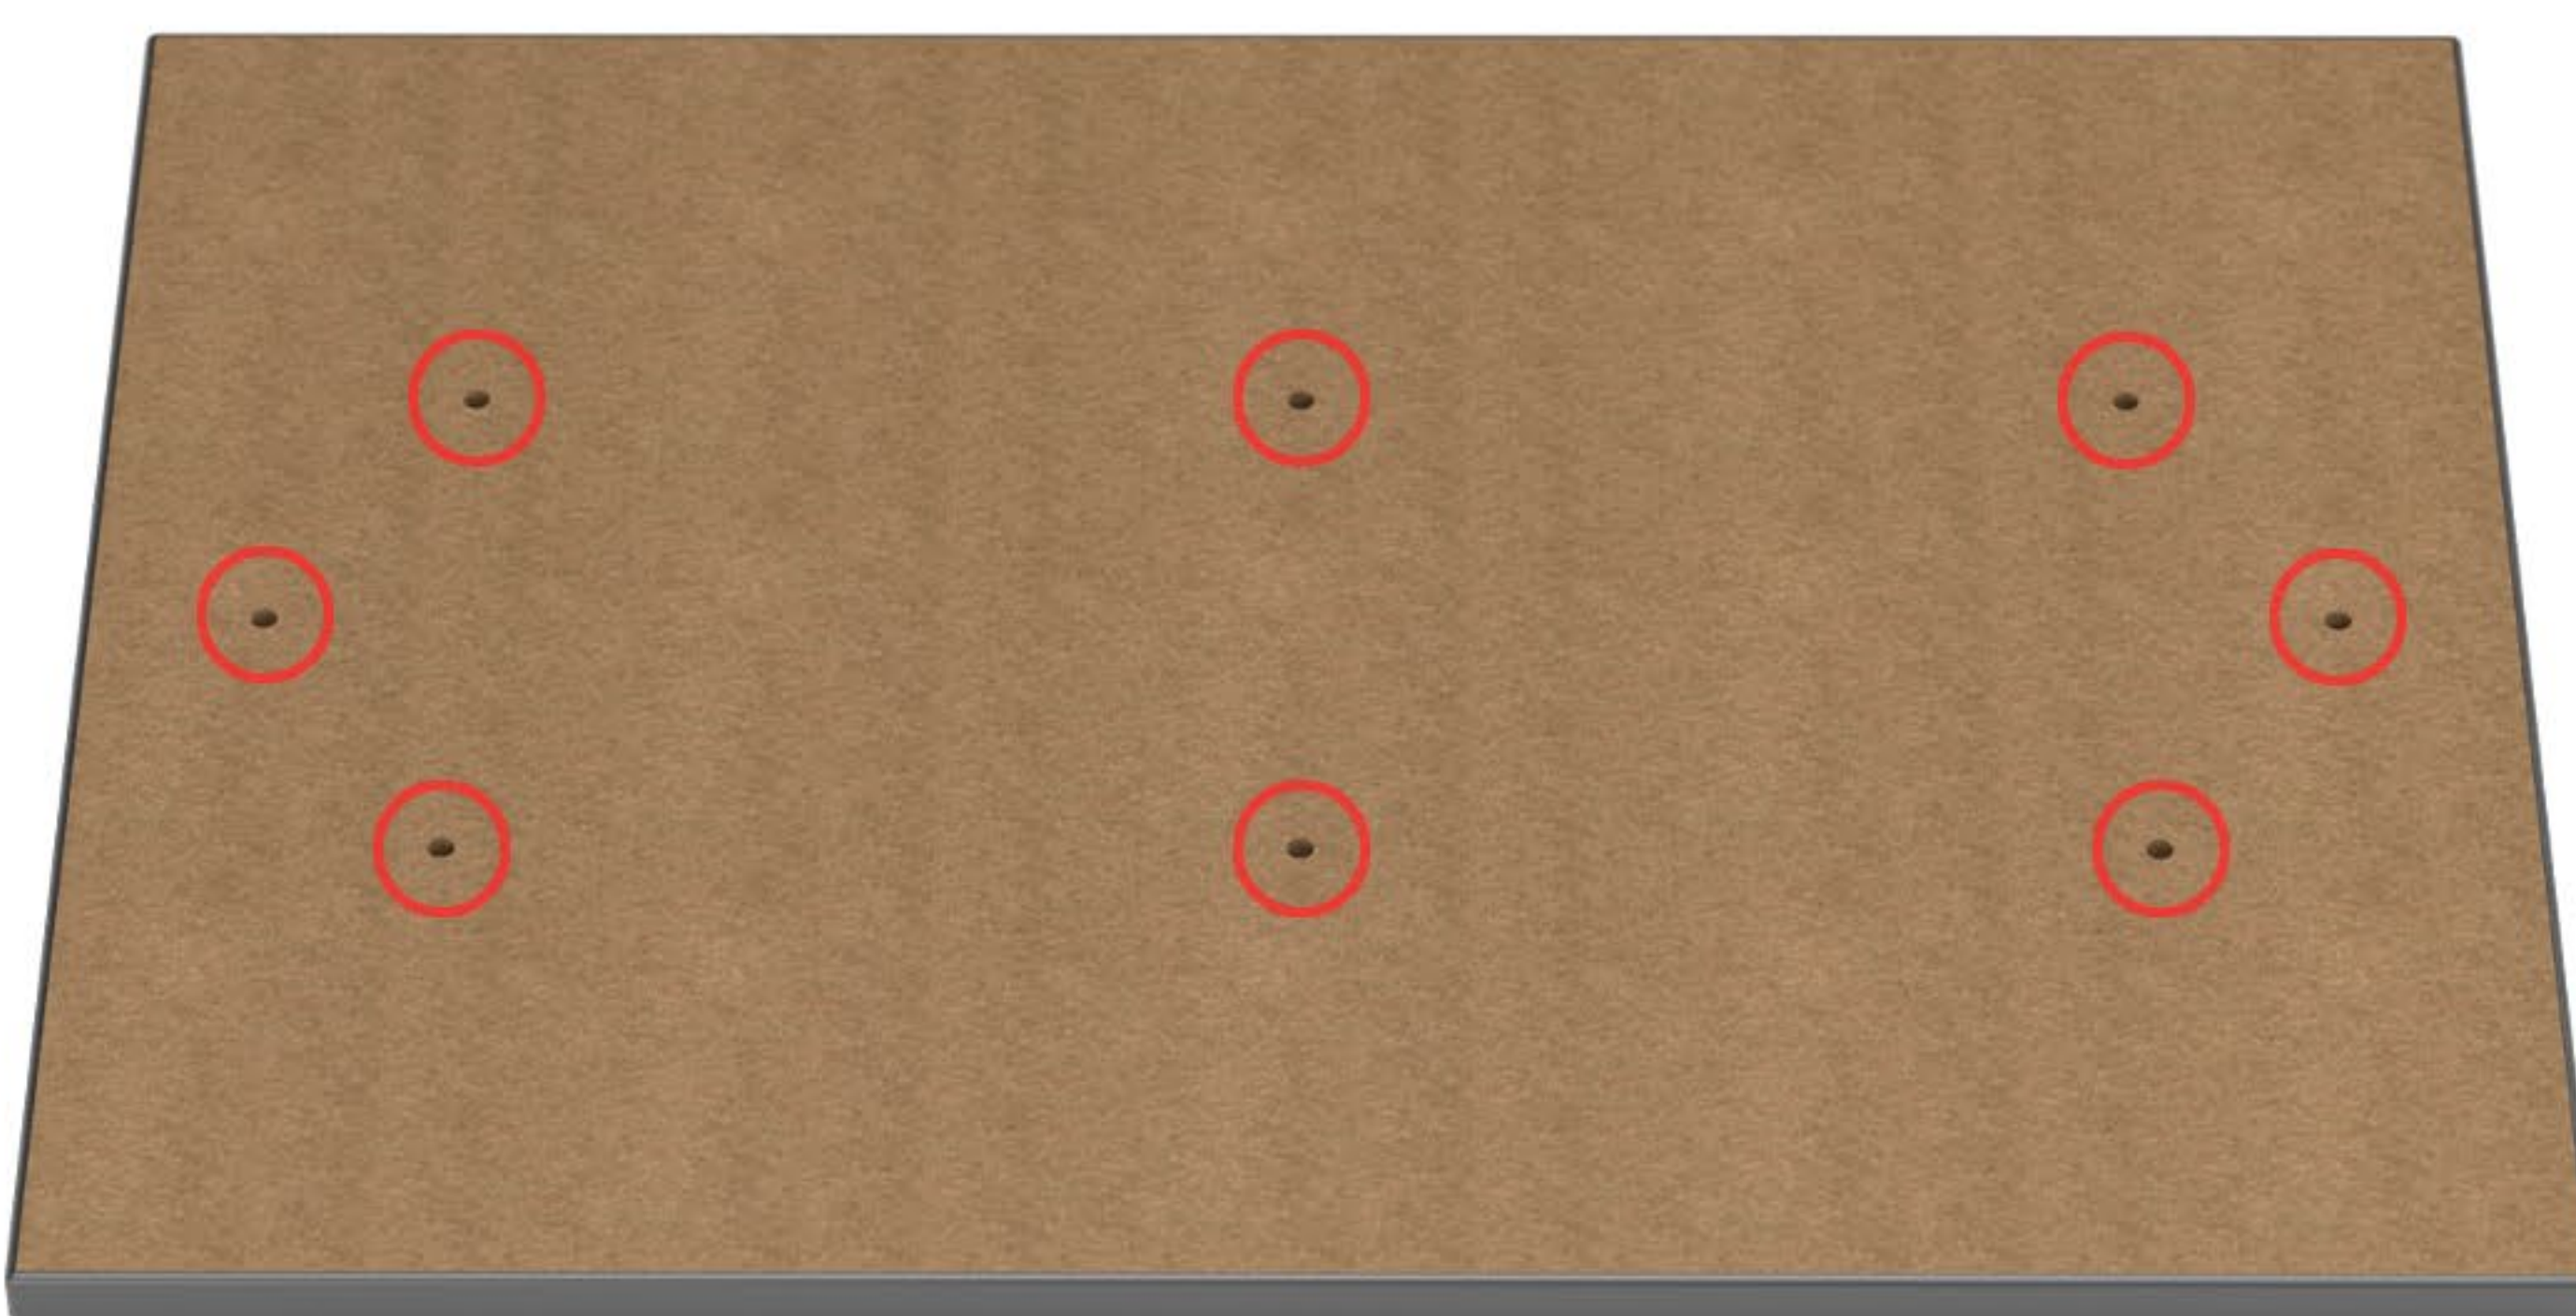


STEP 3

Lay the base on the back of the tabletop and line up the holes in the metal tabs of the base with the metal inserts on the tabletop.

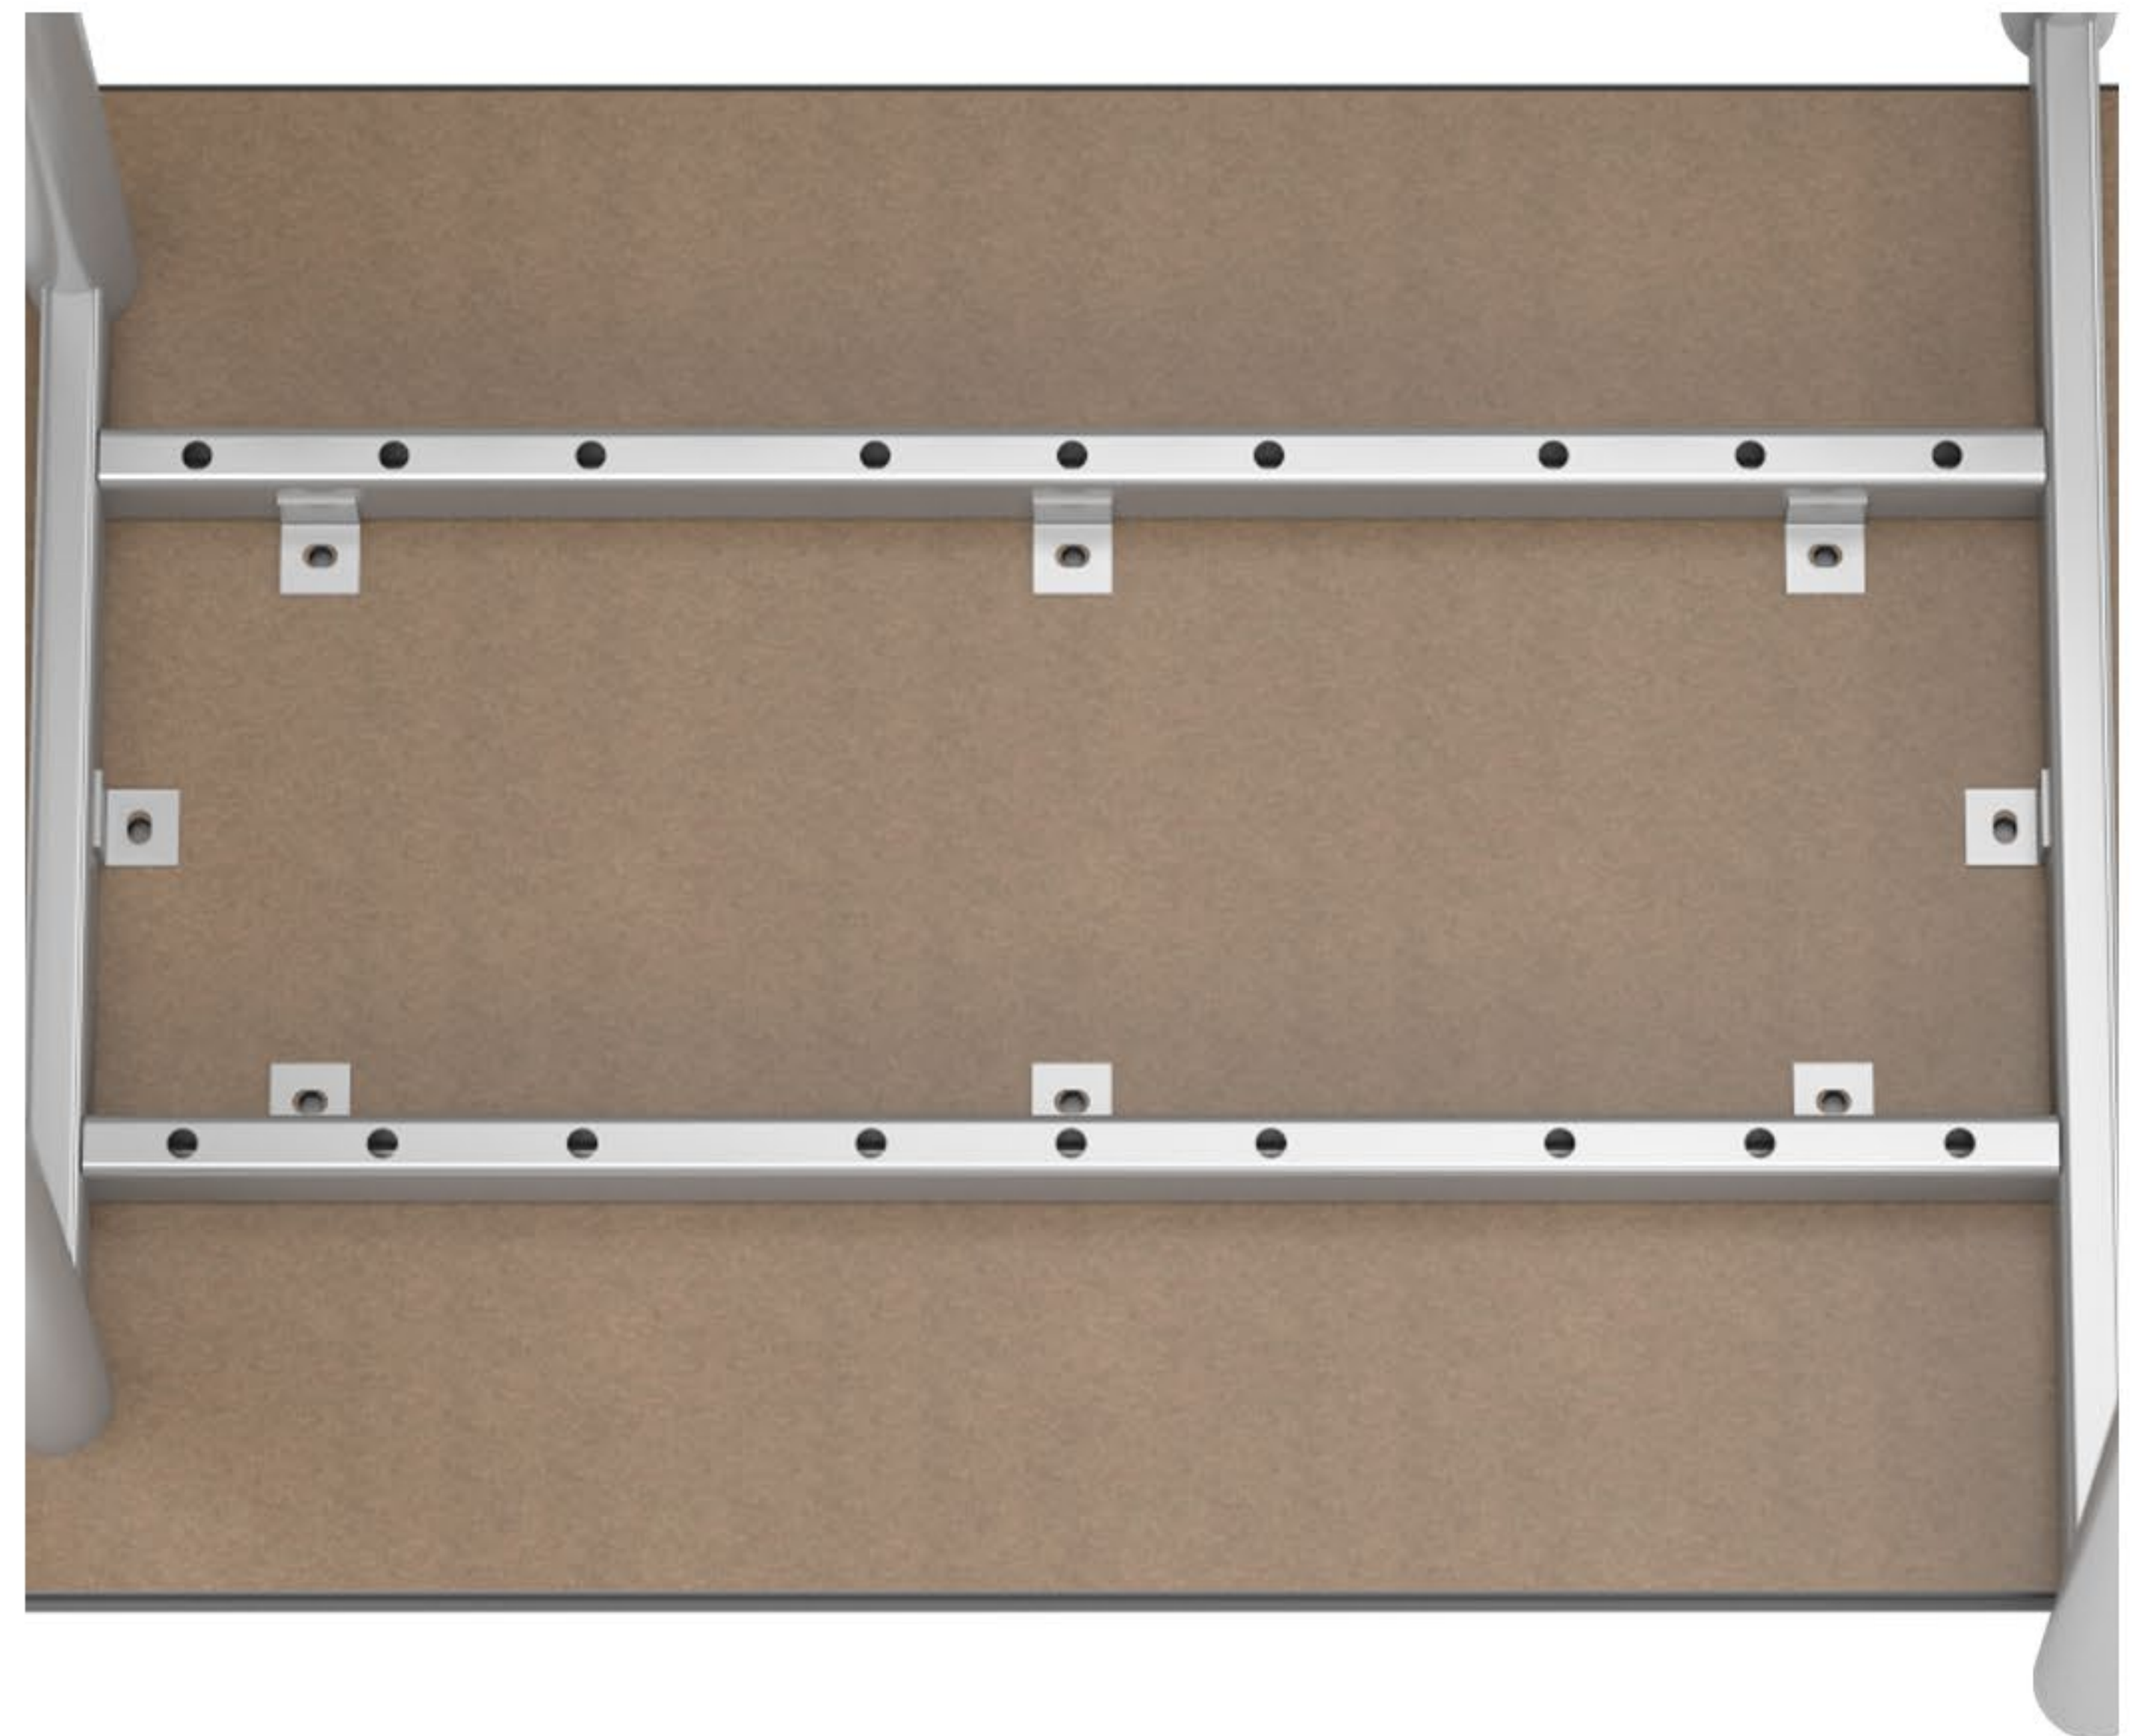

STEP 4

Screw the eight 1/4-20 x 5/8 bolts through the eight metal tabs of the base and into the metal tabletop inserts.

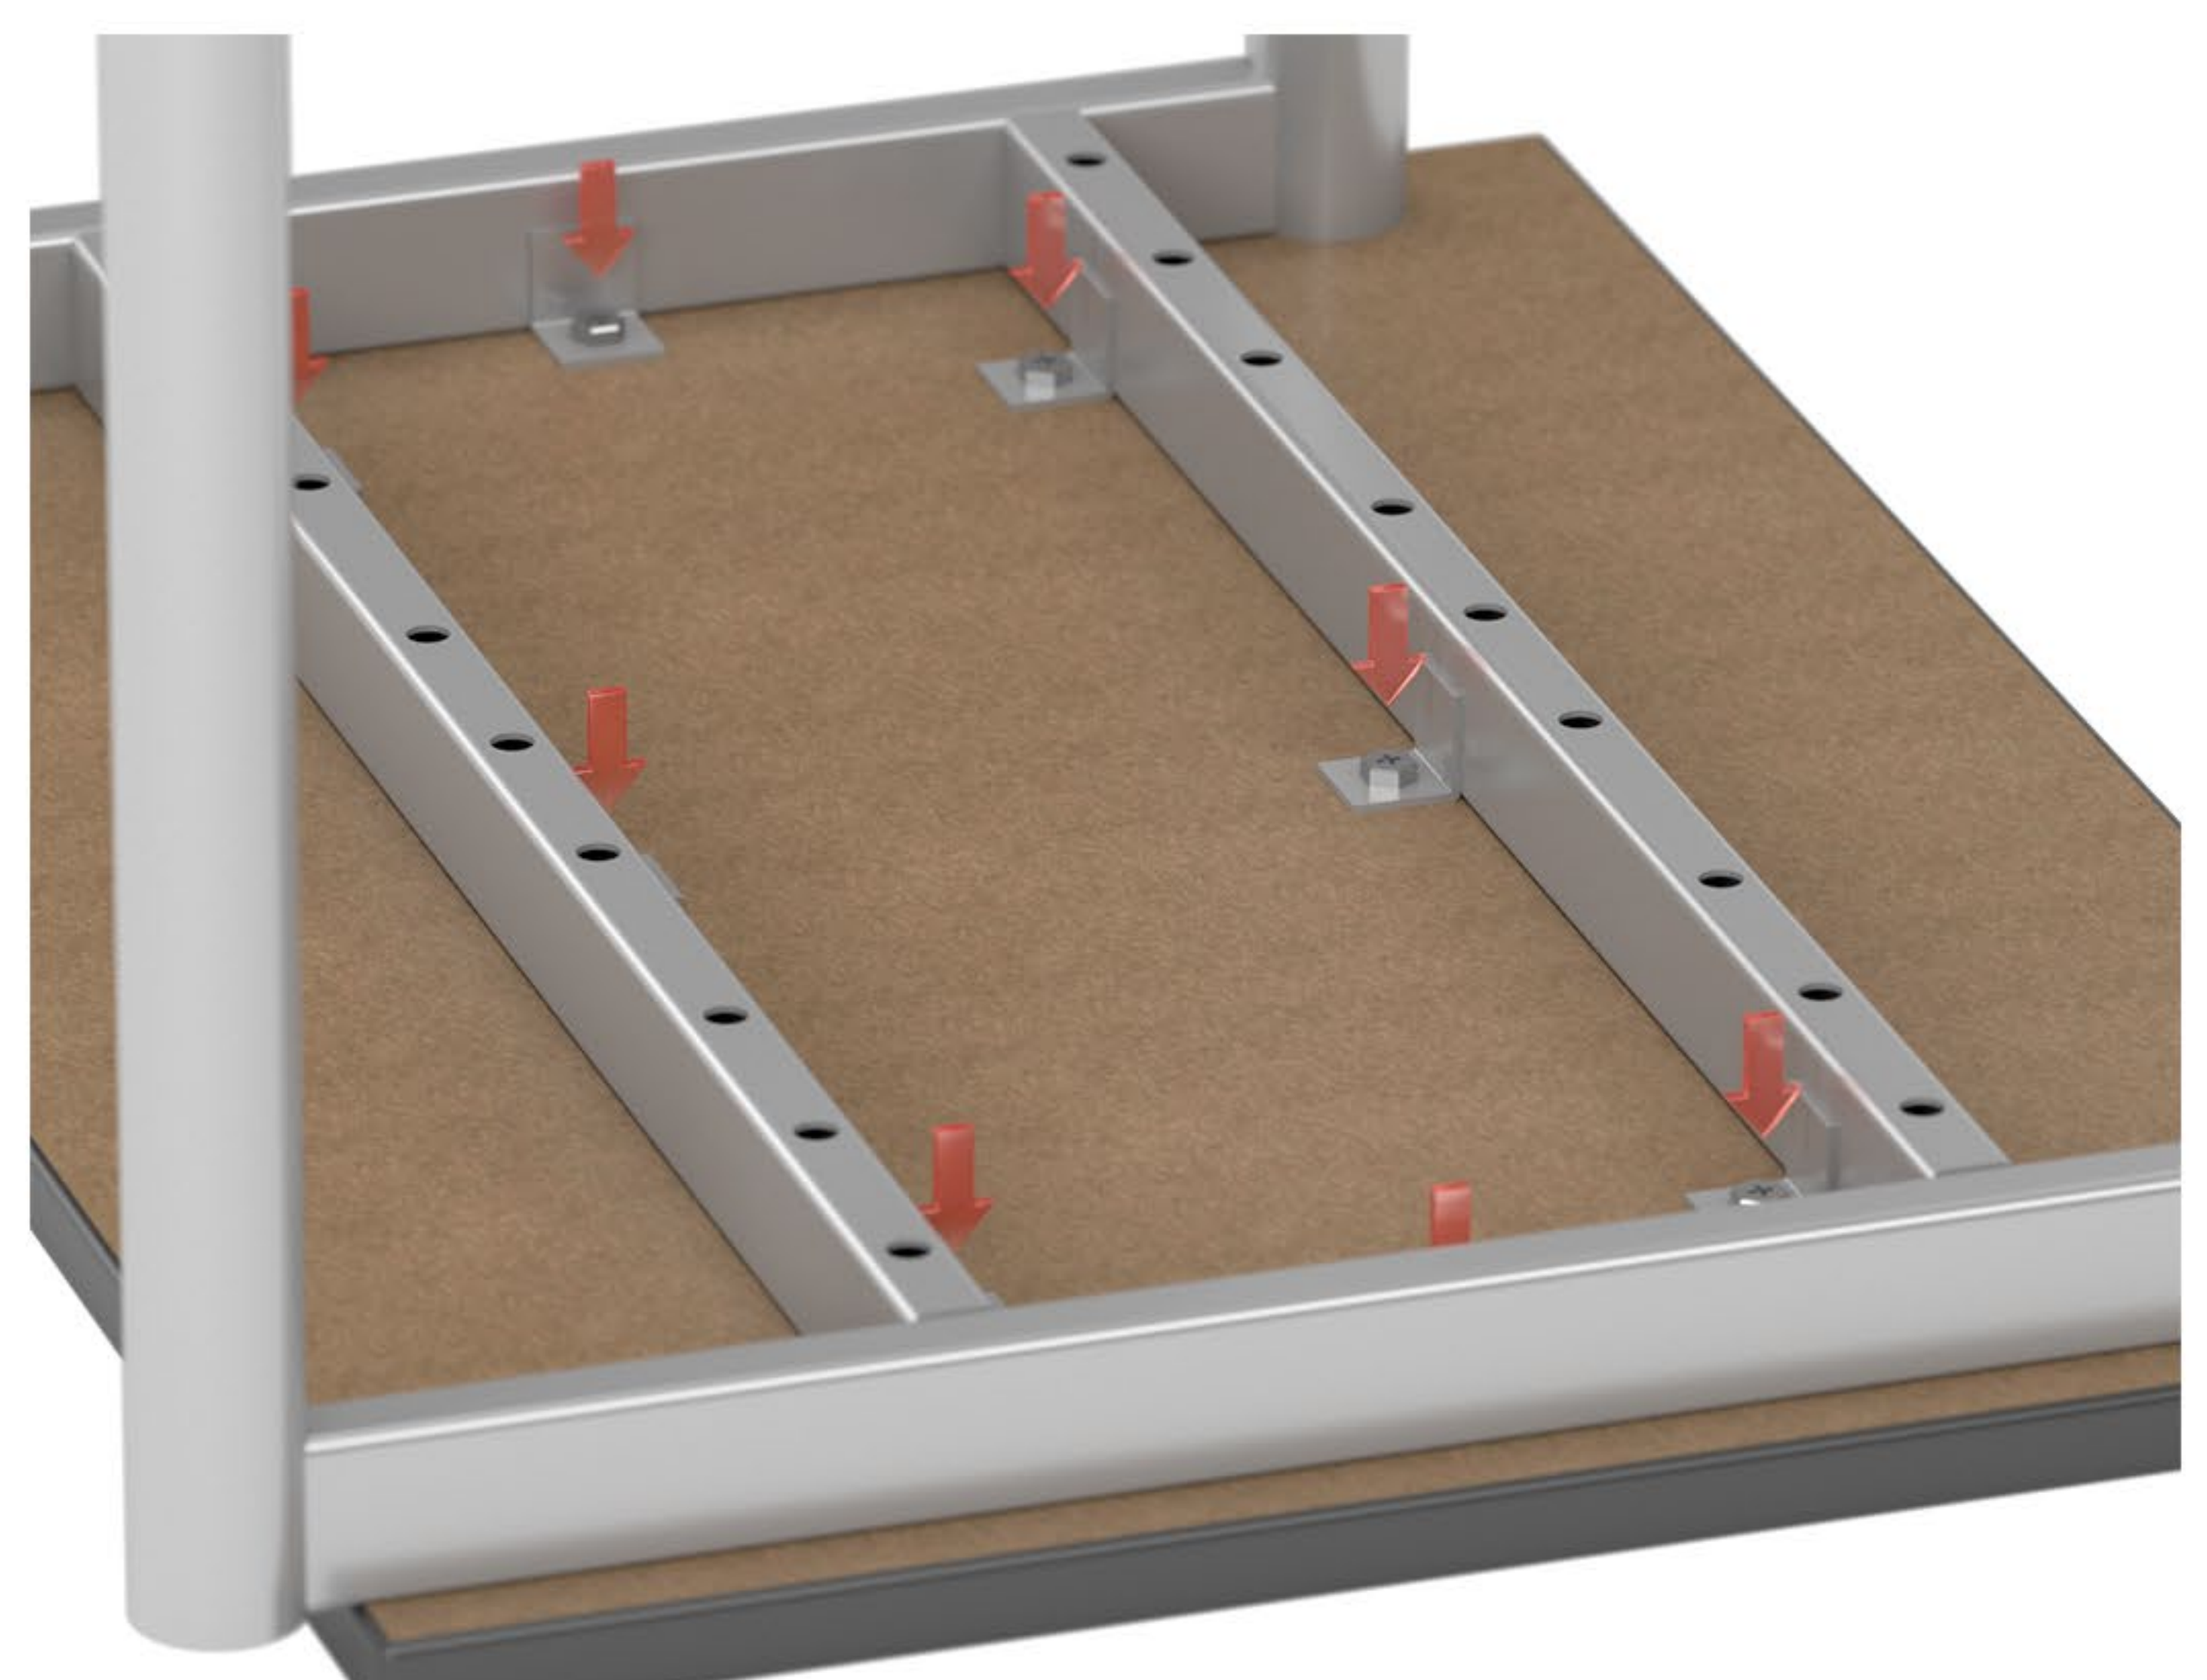

STEP 5

Attach the scratch guards to the base by popping them into the three sets of three holes on each side (three scratch guards per side).




STEP 7

Flip the table over for use.



STEP 6* (This step only applies to units w/ adjustable legs)

Using the set screw bolts attached to the leg, adjust the height of the SST legs to the desired height.

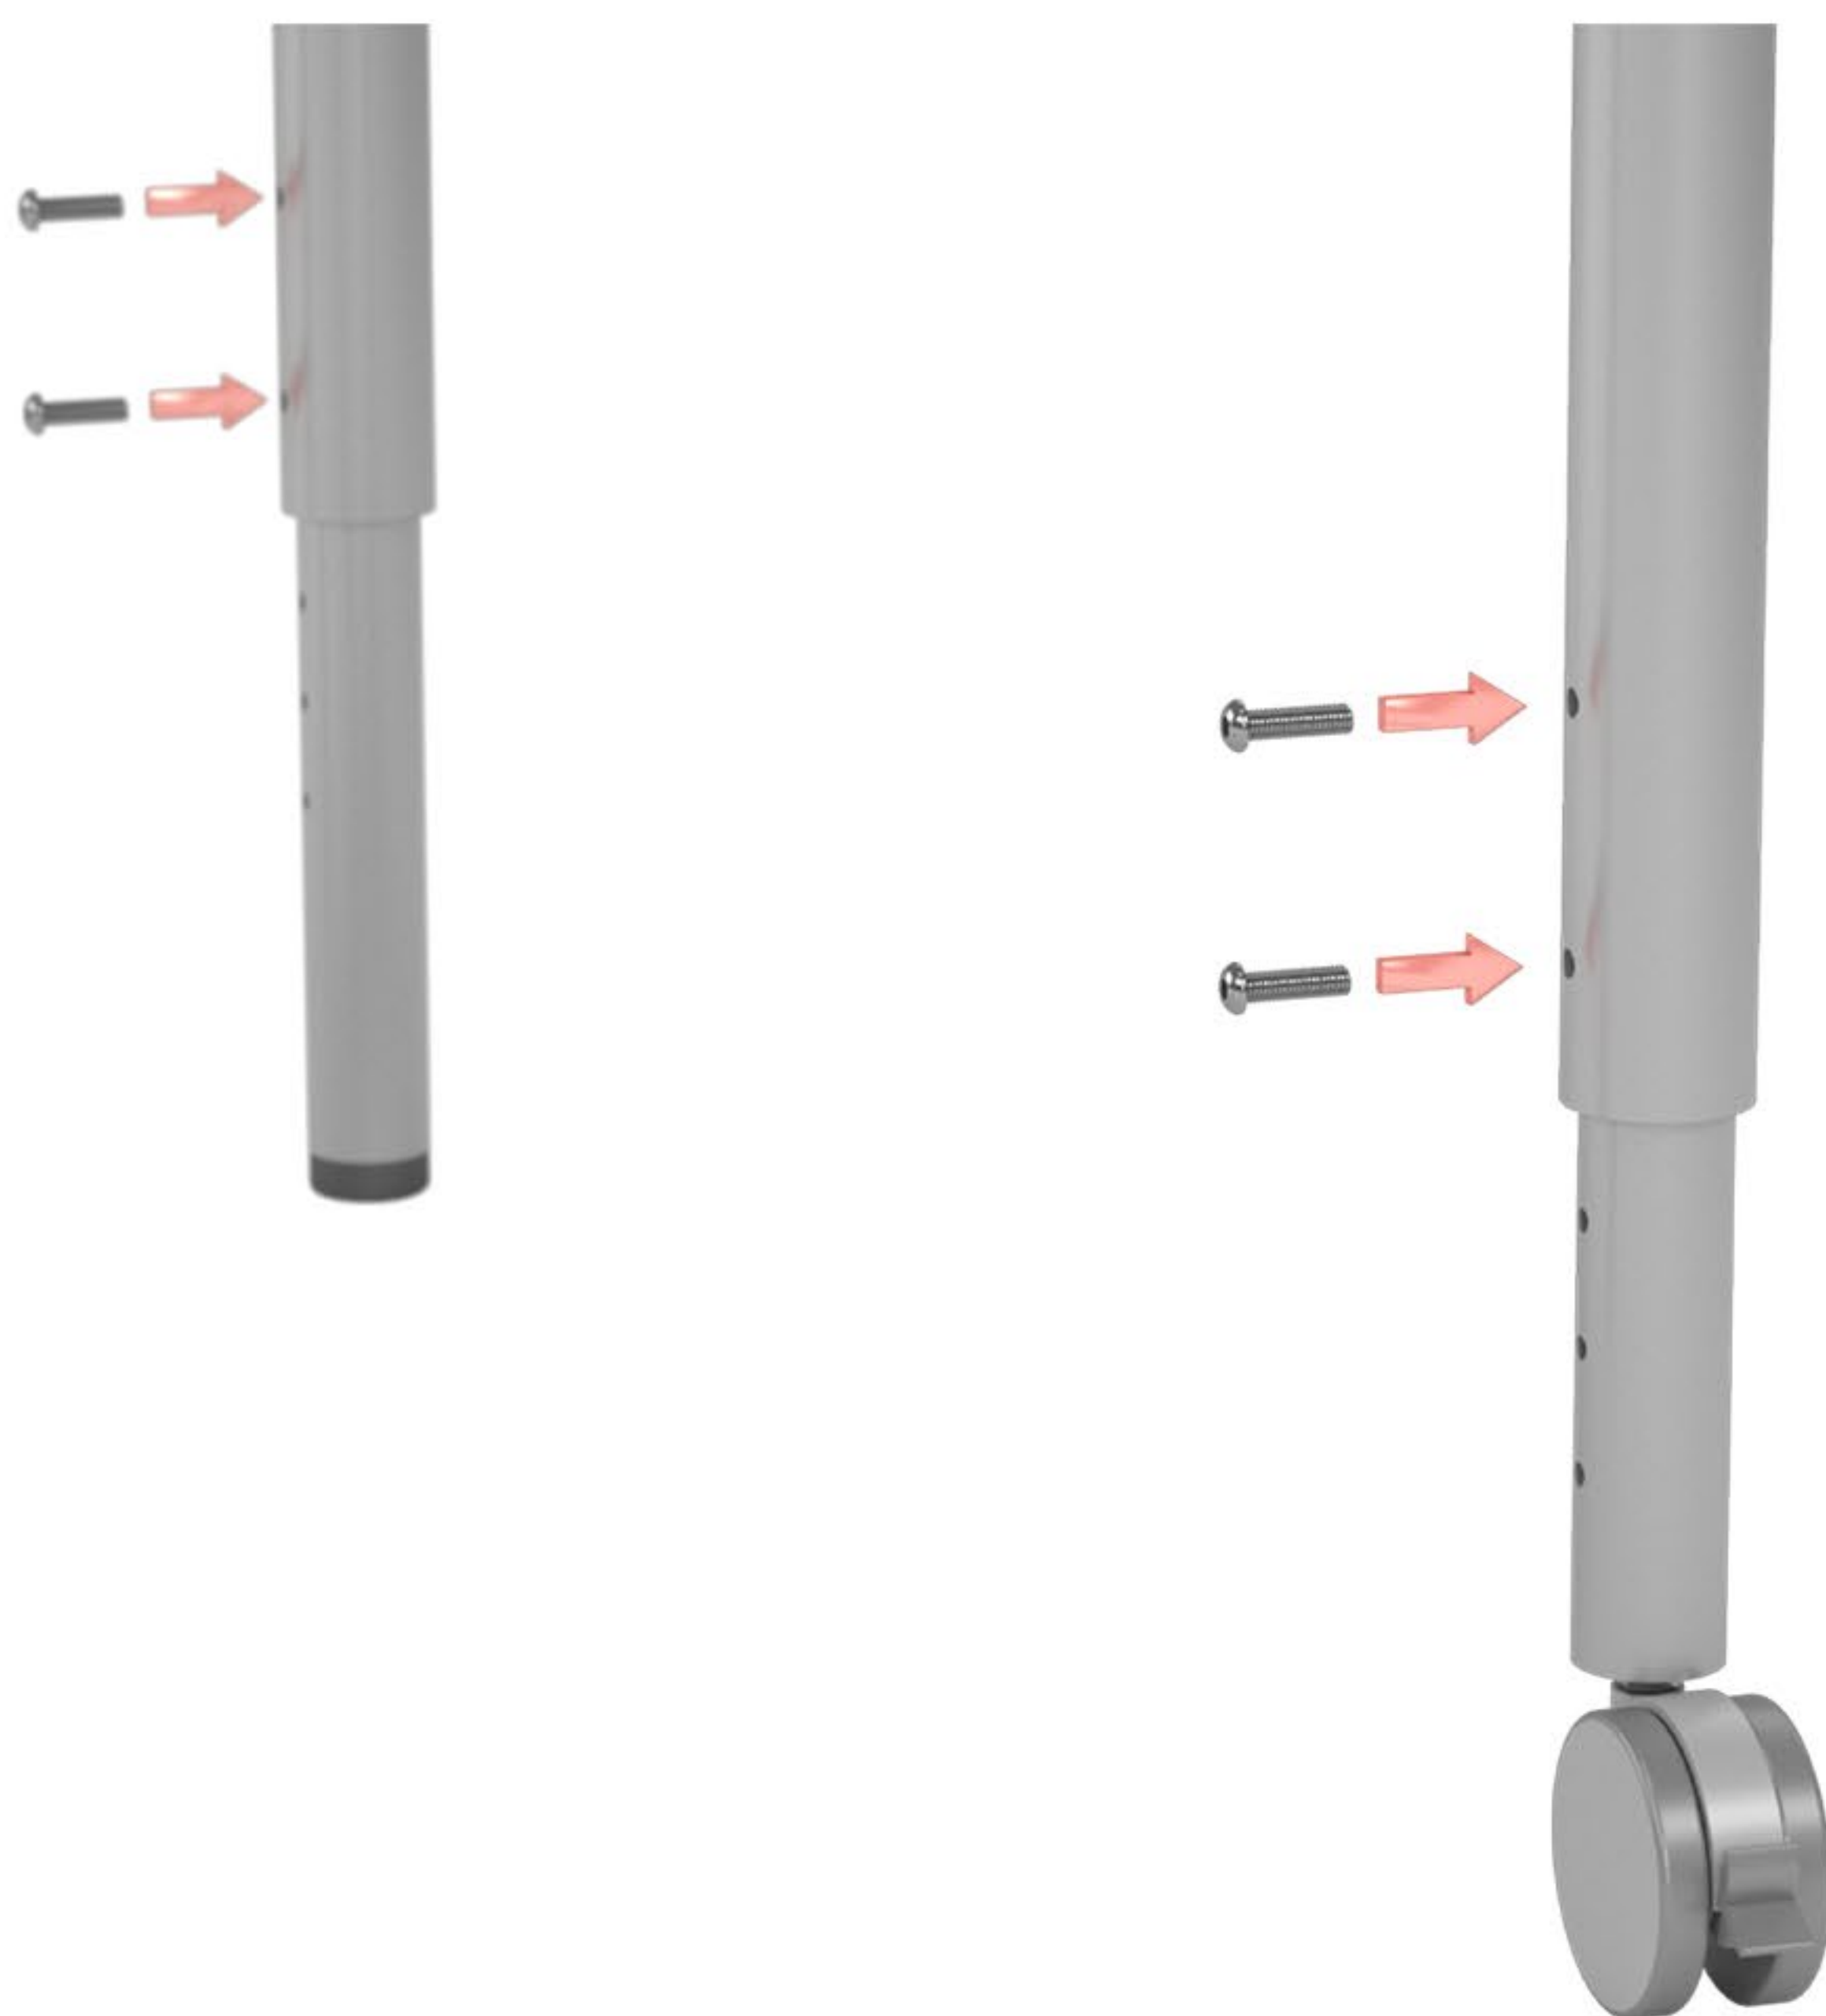

STEP 8

If you have any questions, please contact MiEN Environments at **616-818-1970**