

STEP 1


Make sure that the following hardware and/or components are present before beginning assembly.

- Tabletop
- DIAL Legs
- Stiffener Bar (If necessary)
- (8 per leg) 1/4-20x3/4 Bolts
- #10 3/4" Wood Screws (If necessary)



STEP 2

Flip the tabletop over to expose the metal inserts.

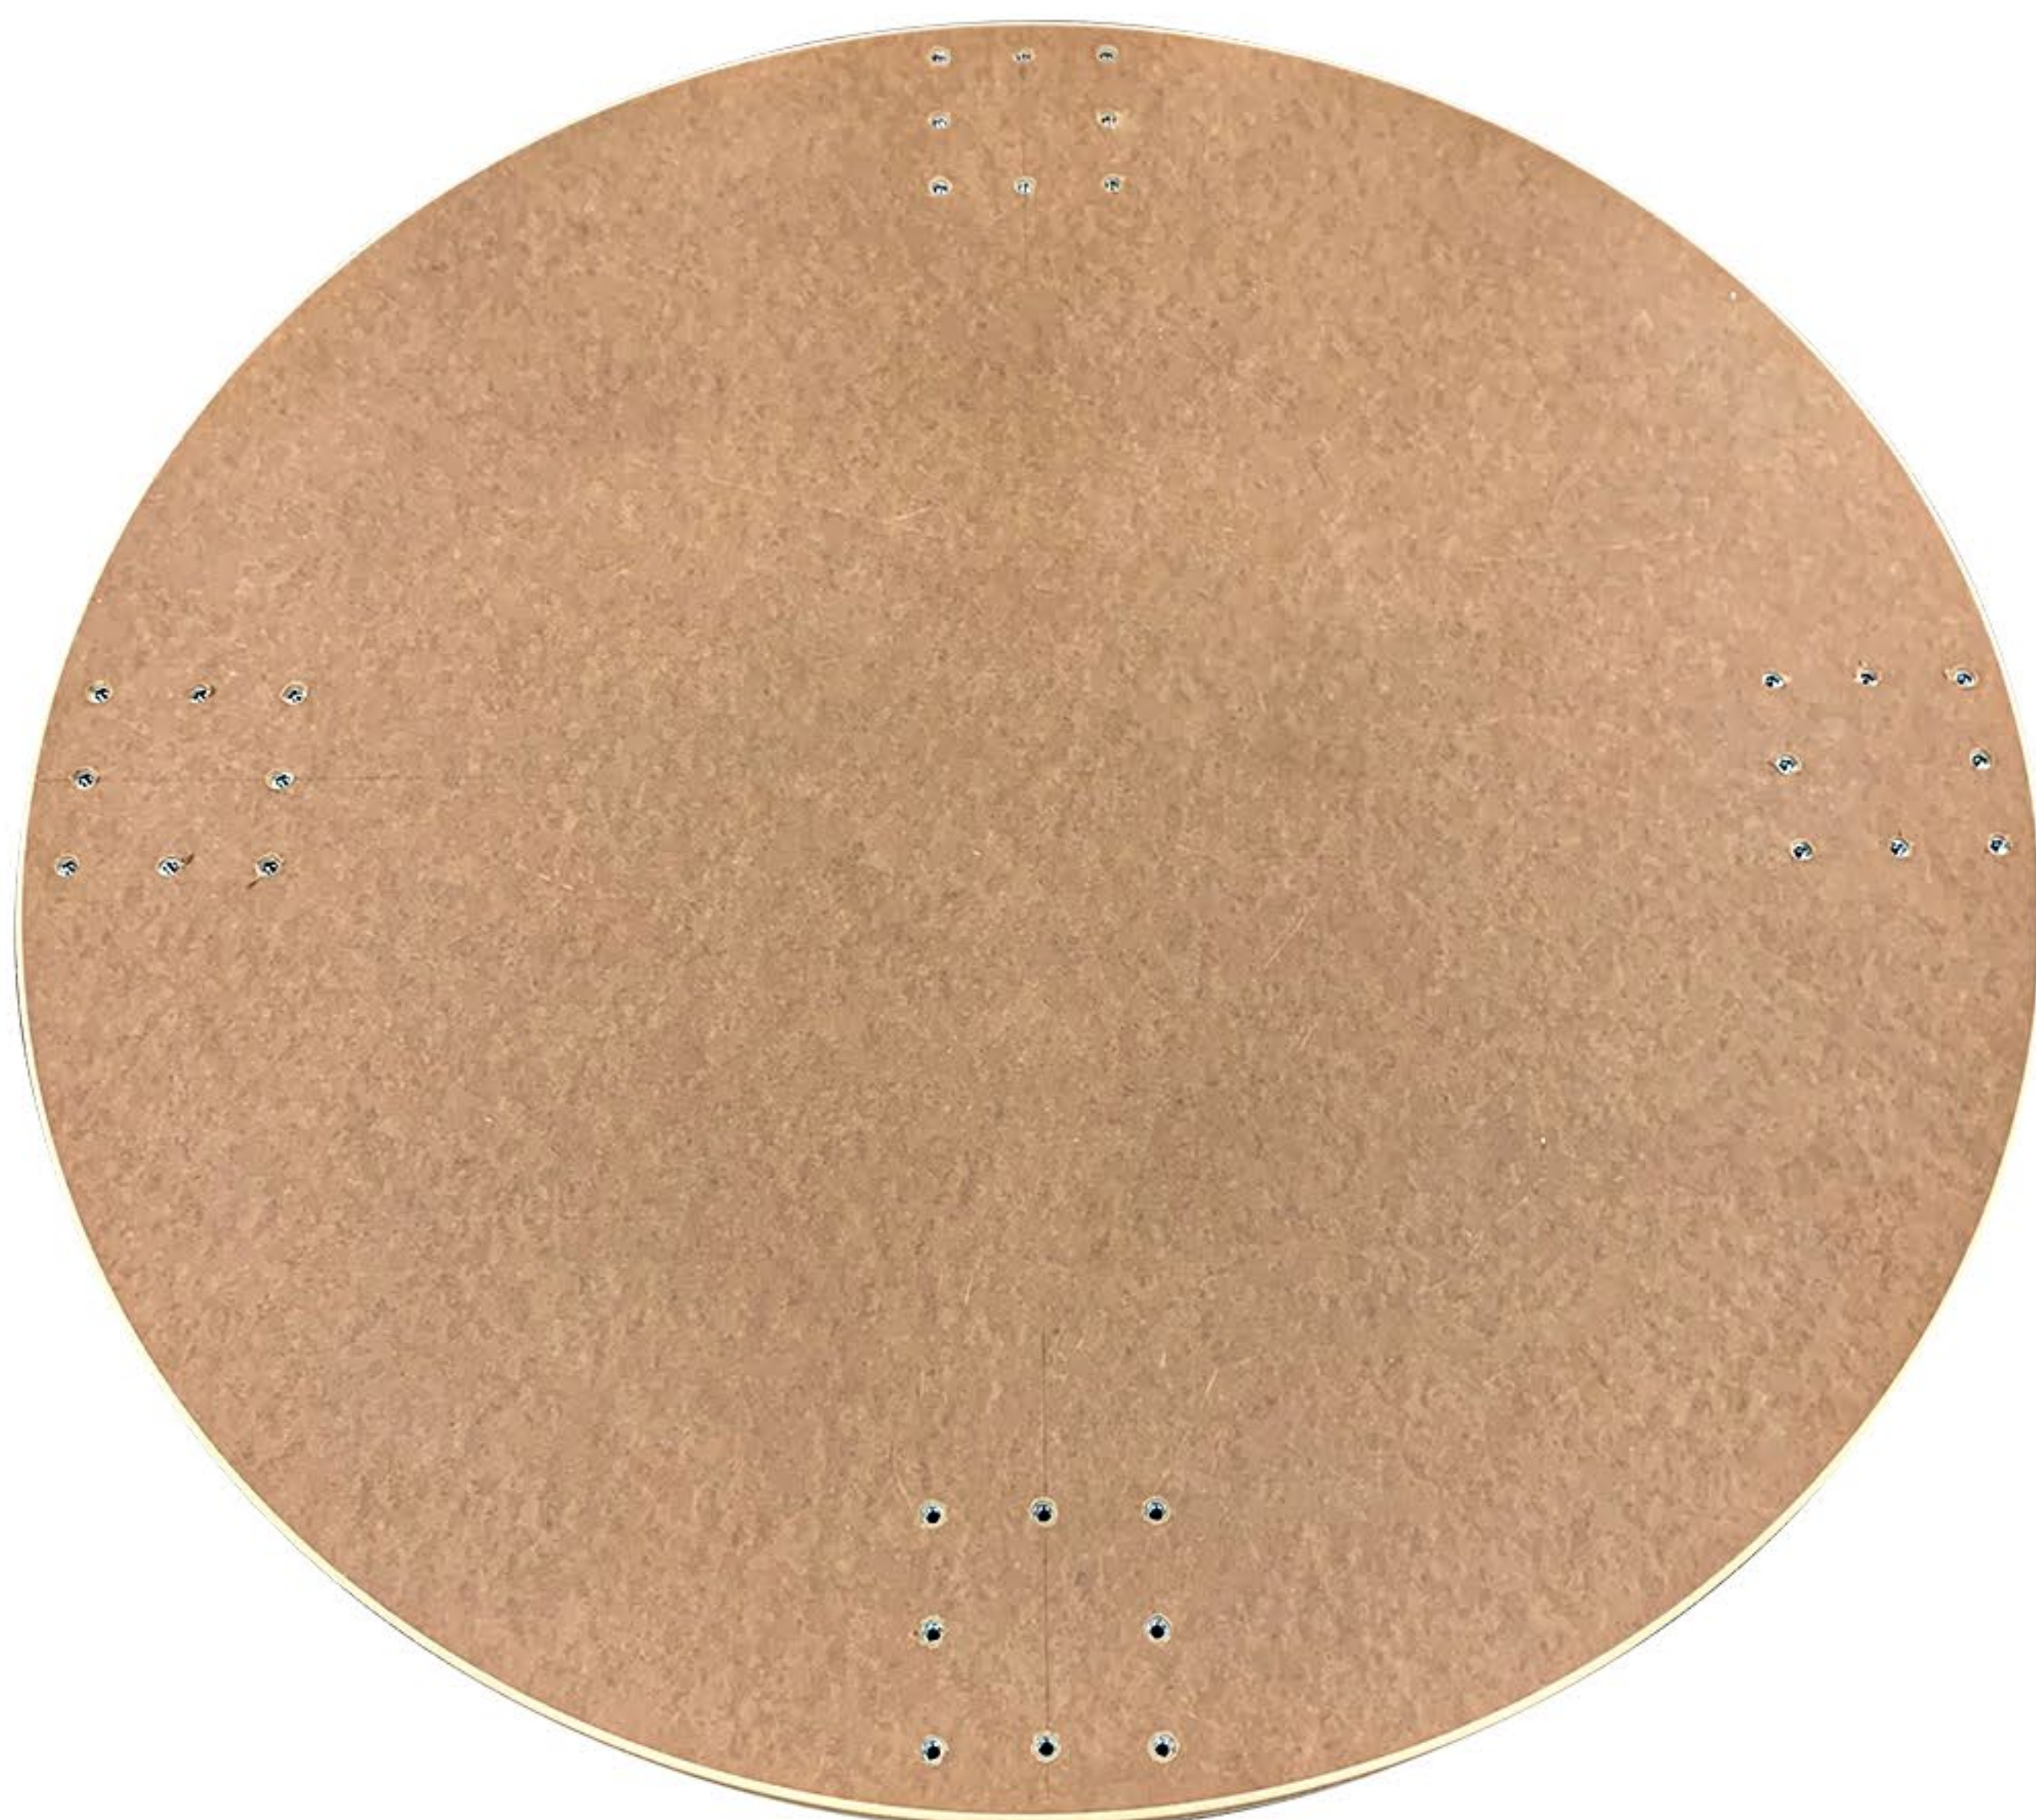

STEP 3


Set the dial leg over the metal insert locations.



STEP 4


Attaching DIAL legs to the tabletop.

- Lightly screw in all 8 1/4-20x3/4 Bolts.
- Tighten each bolt once they are all in place.

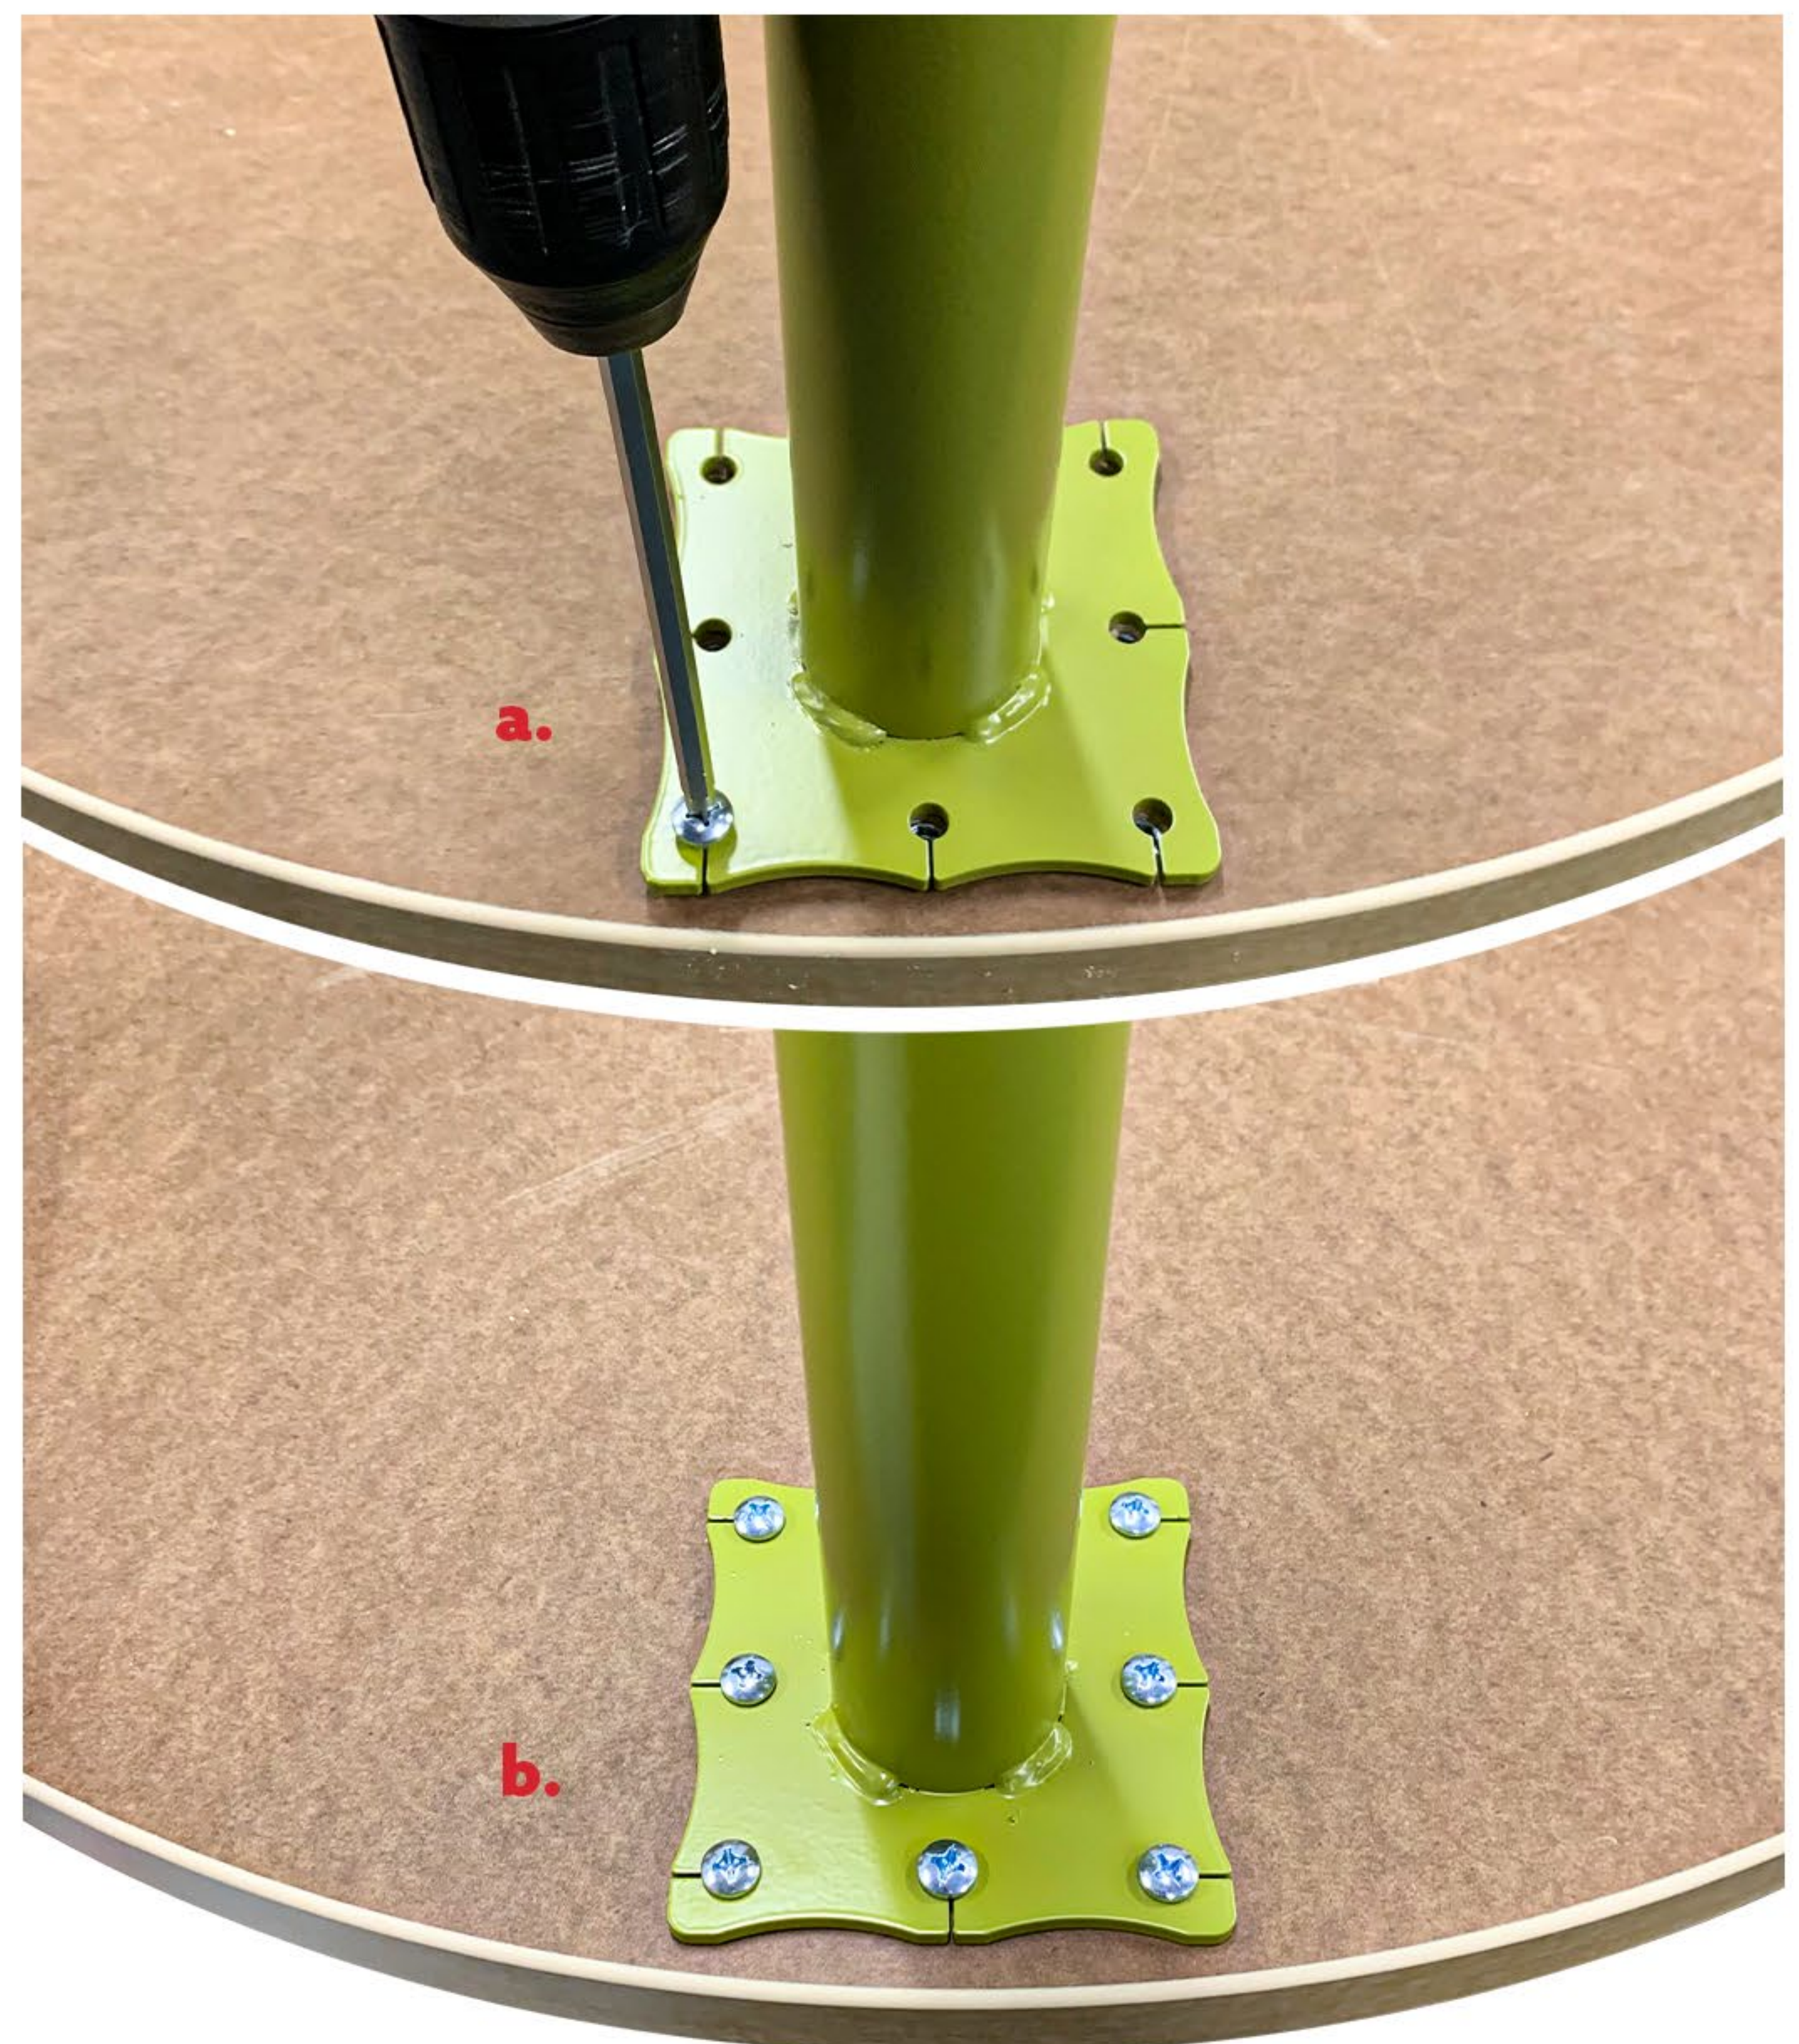

STEP 5

Repeat for all legs.

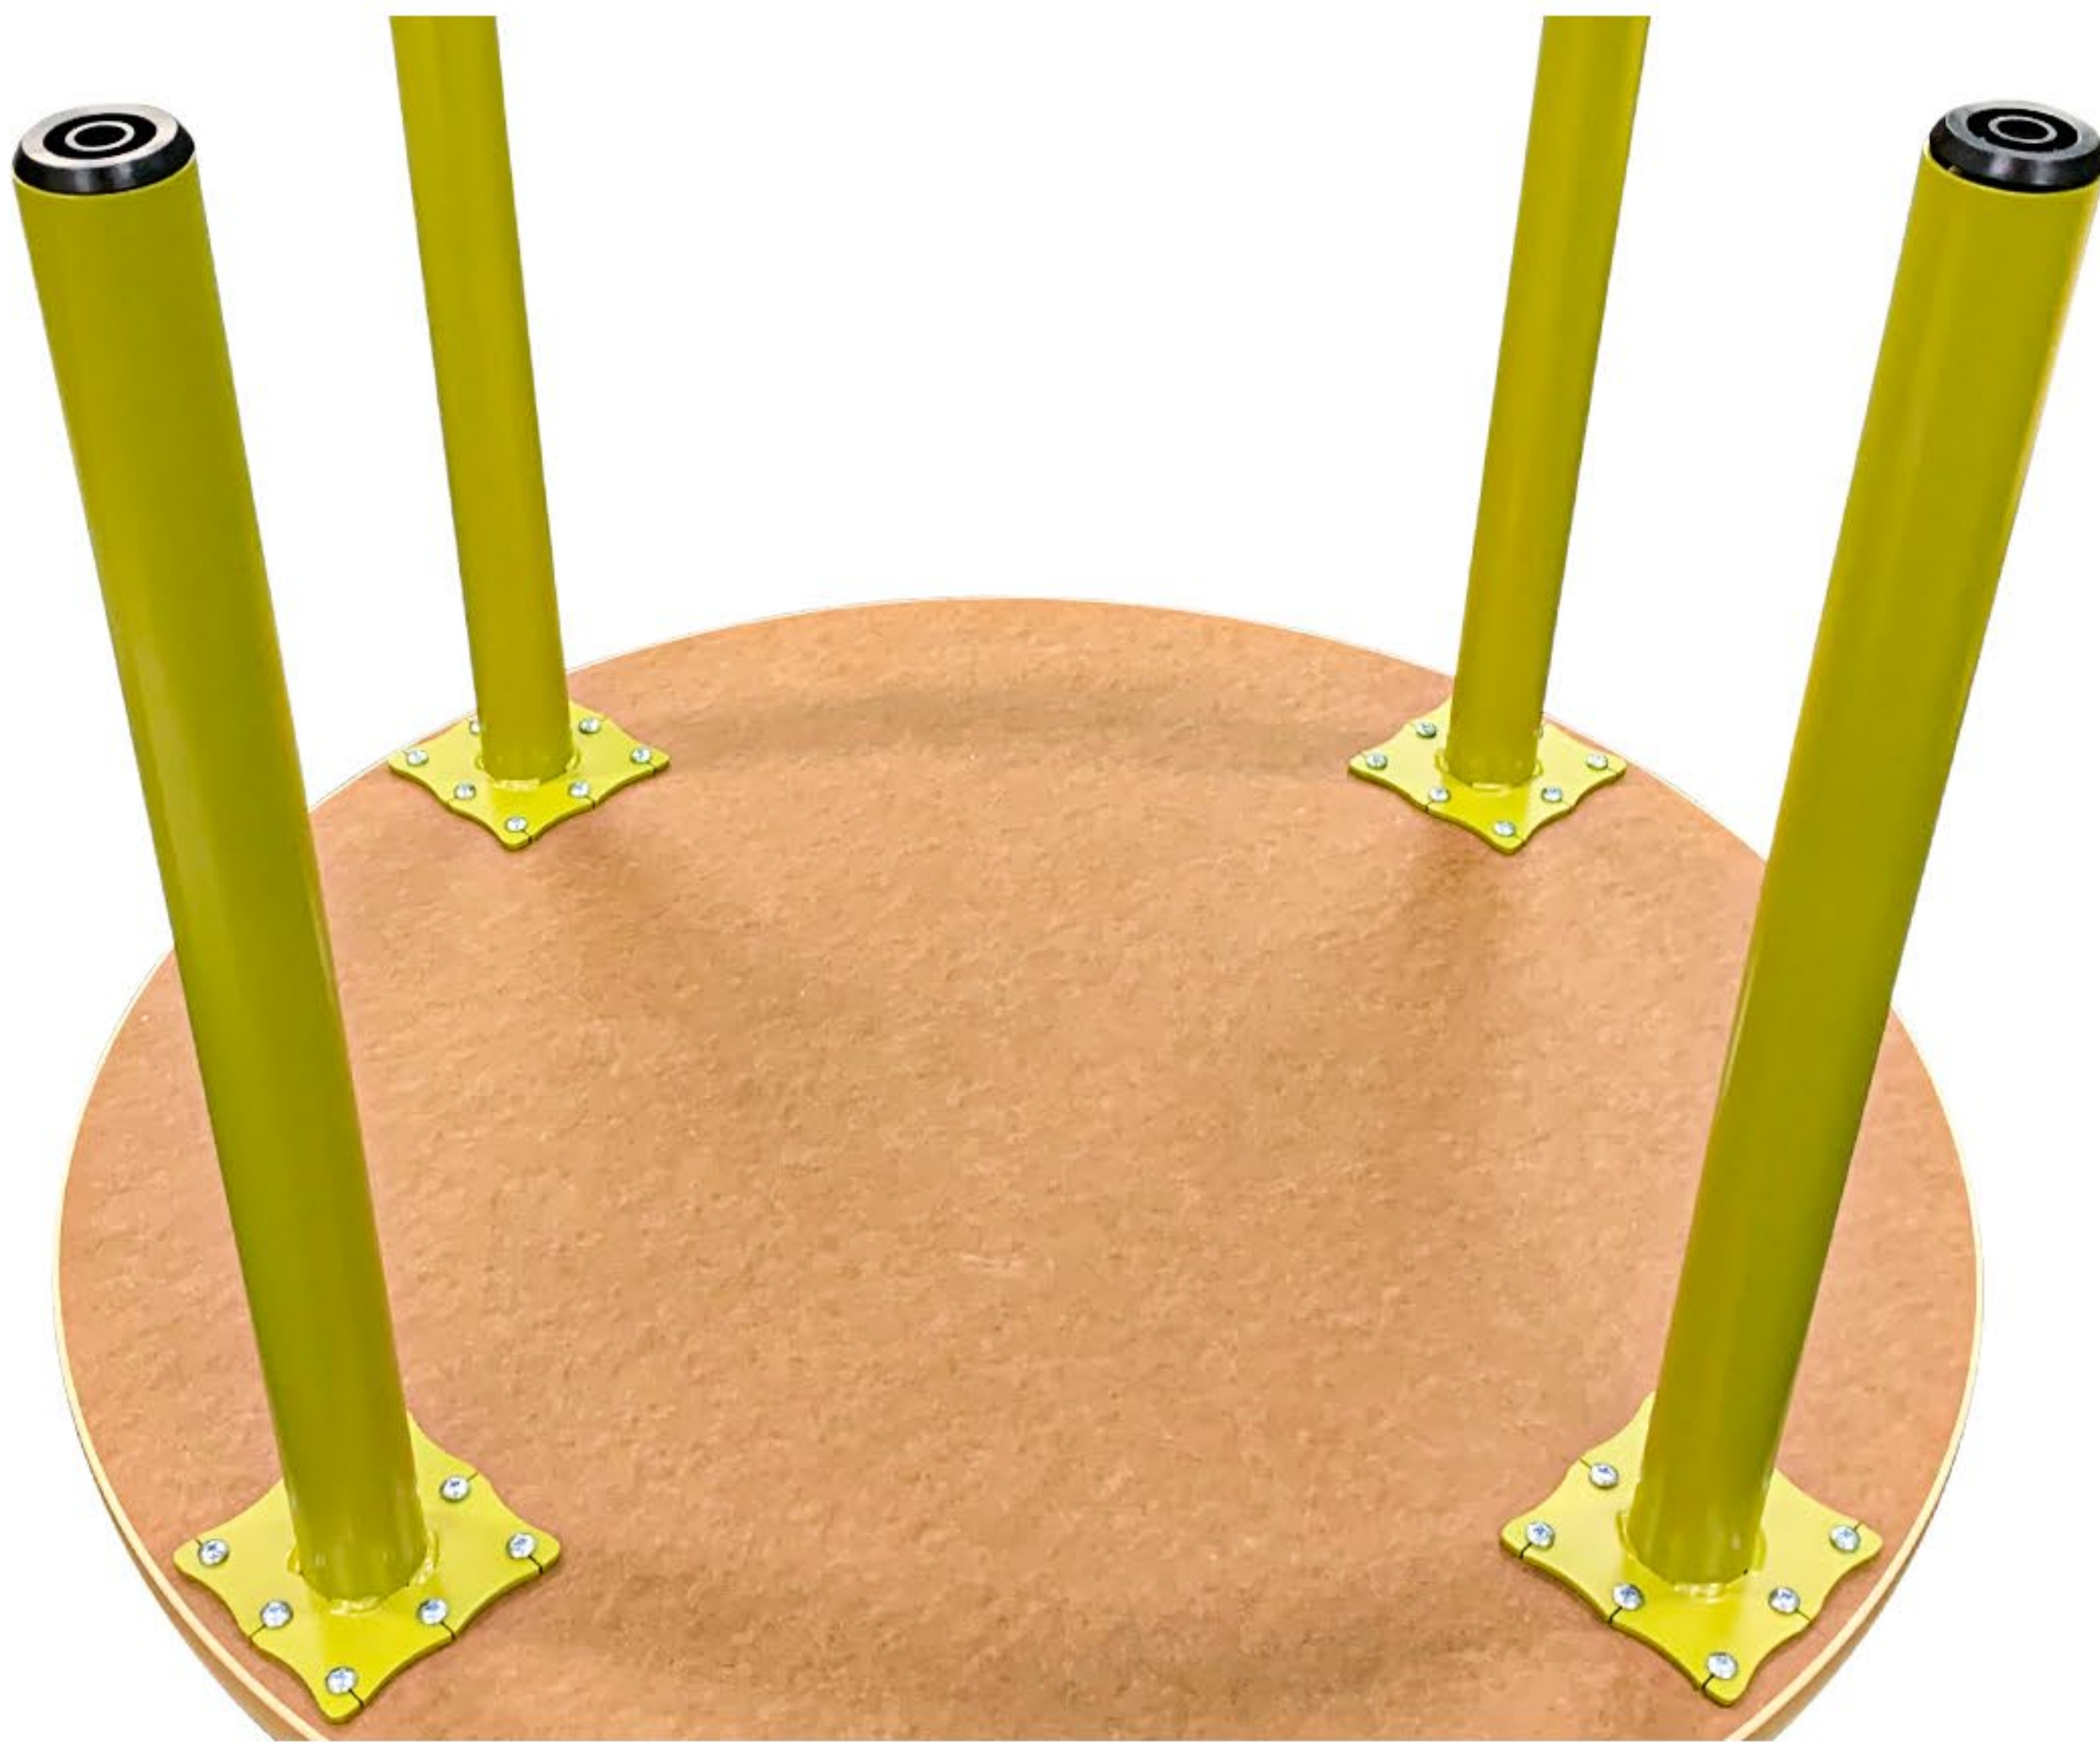

STEP 7


Flip table over for use.



STEP 6* (This step only applies to units w/ stiffener bar)

Attaching stiffener bar to the tabletop.

- Lay the stiffener bar over the pre-drilled holes.
- Screw stiffener bar into the pre-drilled holes using #10 3/4" Wood Screws.

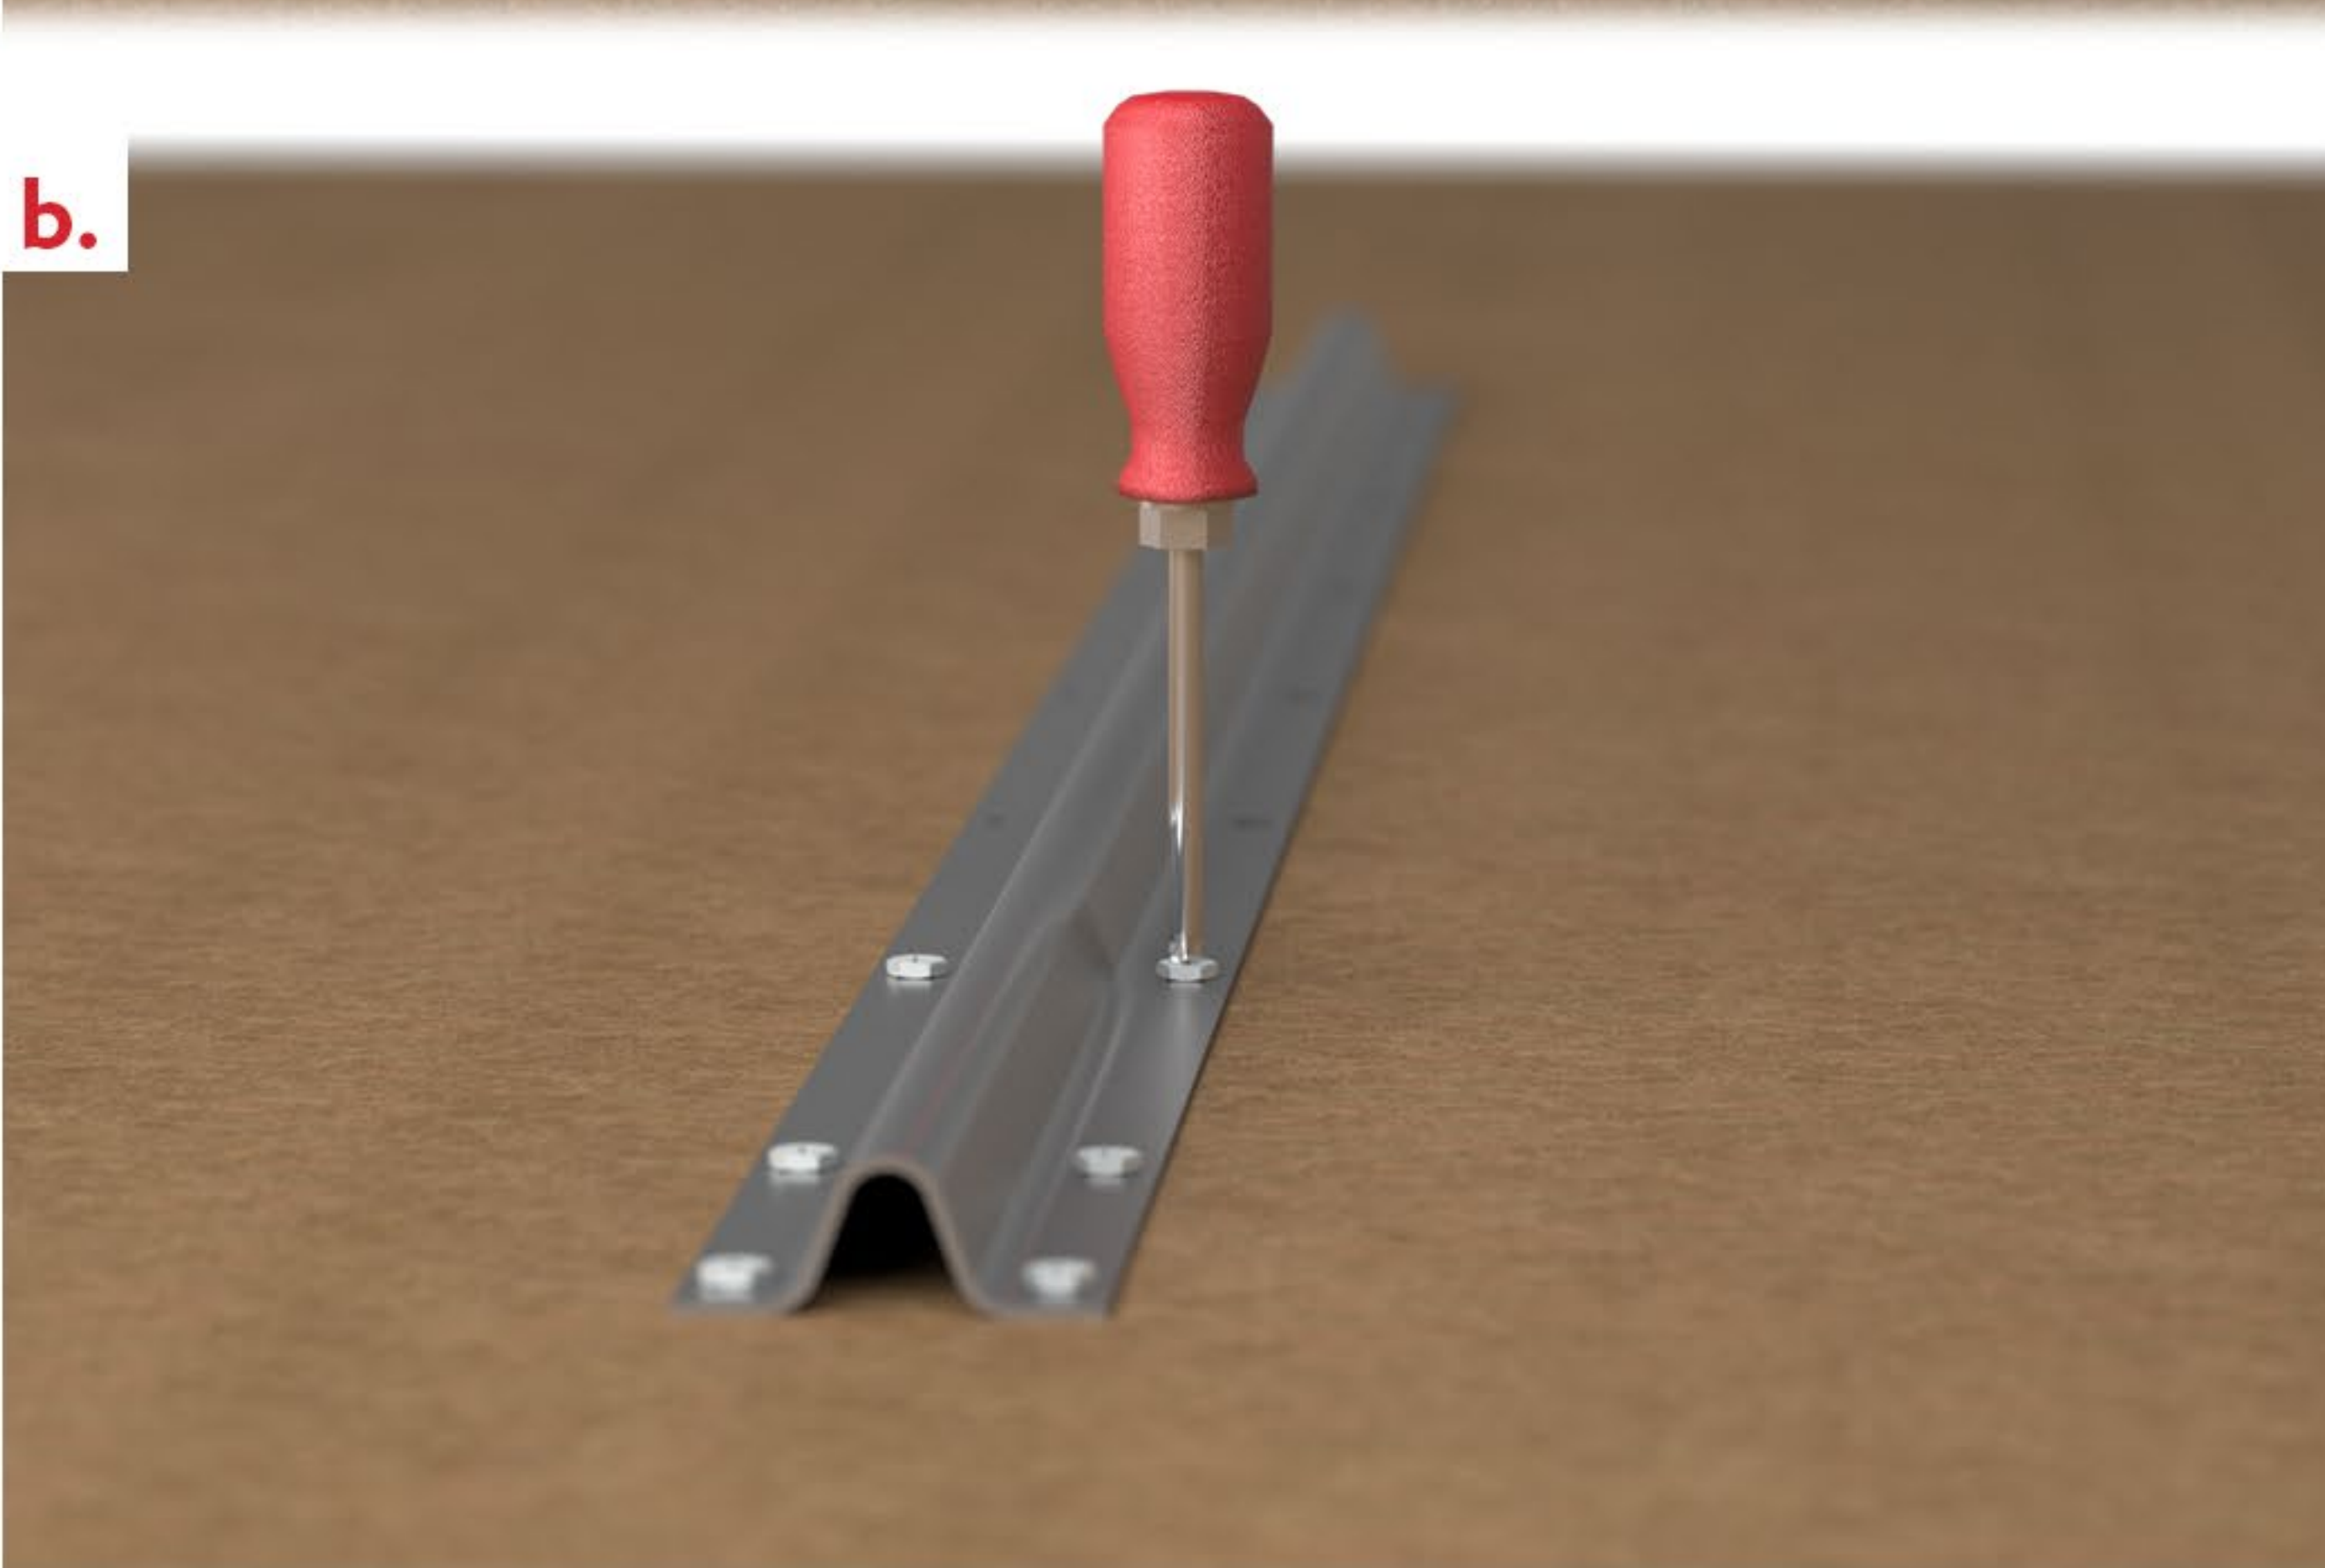

STEP 8

If you have any questions, please contact MiEN Environments at **616-818-1970**