

STEP 1

Make sure that the following hardware and/or components are present before beginning assembly.
* **ITEMS LISTED BELOW IN RED ARE FOUND IN THE RED HARDWARE BOX PICTURED BELOW. IF THIS BOX IS MISSING PLEASE CALL MiEN FOR ASSISTANCE. 616-818-1970**


- Tackable Privacy Screen
- Metal Connection Brackets
- Connection Hardware



STEP 2

Connect the metal brackets to the privacy screen using the connection hardware.

- Place the connection brackets on the bottom of the privacy screen, 6" inset from the edge. If that will cause interference with frame components, move the bracket left or right until it clears the table frame.
- Using the provided hardware, drill the screws through the holes in the metal bracket and into the privacy screen. Do not use a high torque setting on an electric drill to make sure the connection is not damaged.

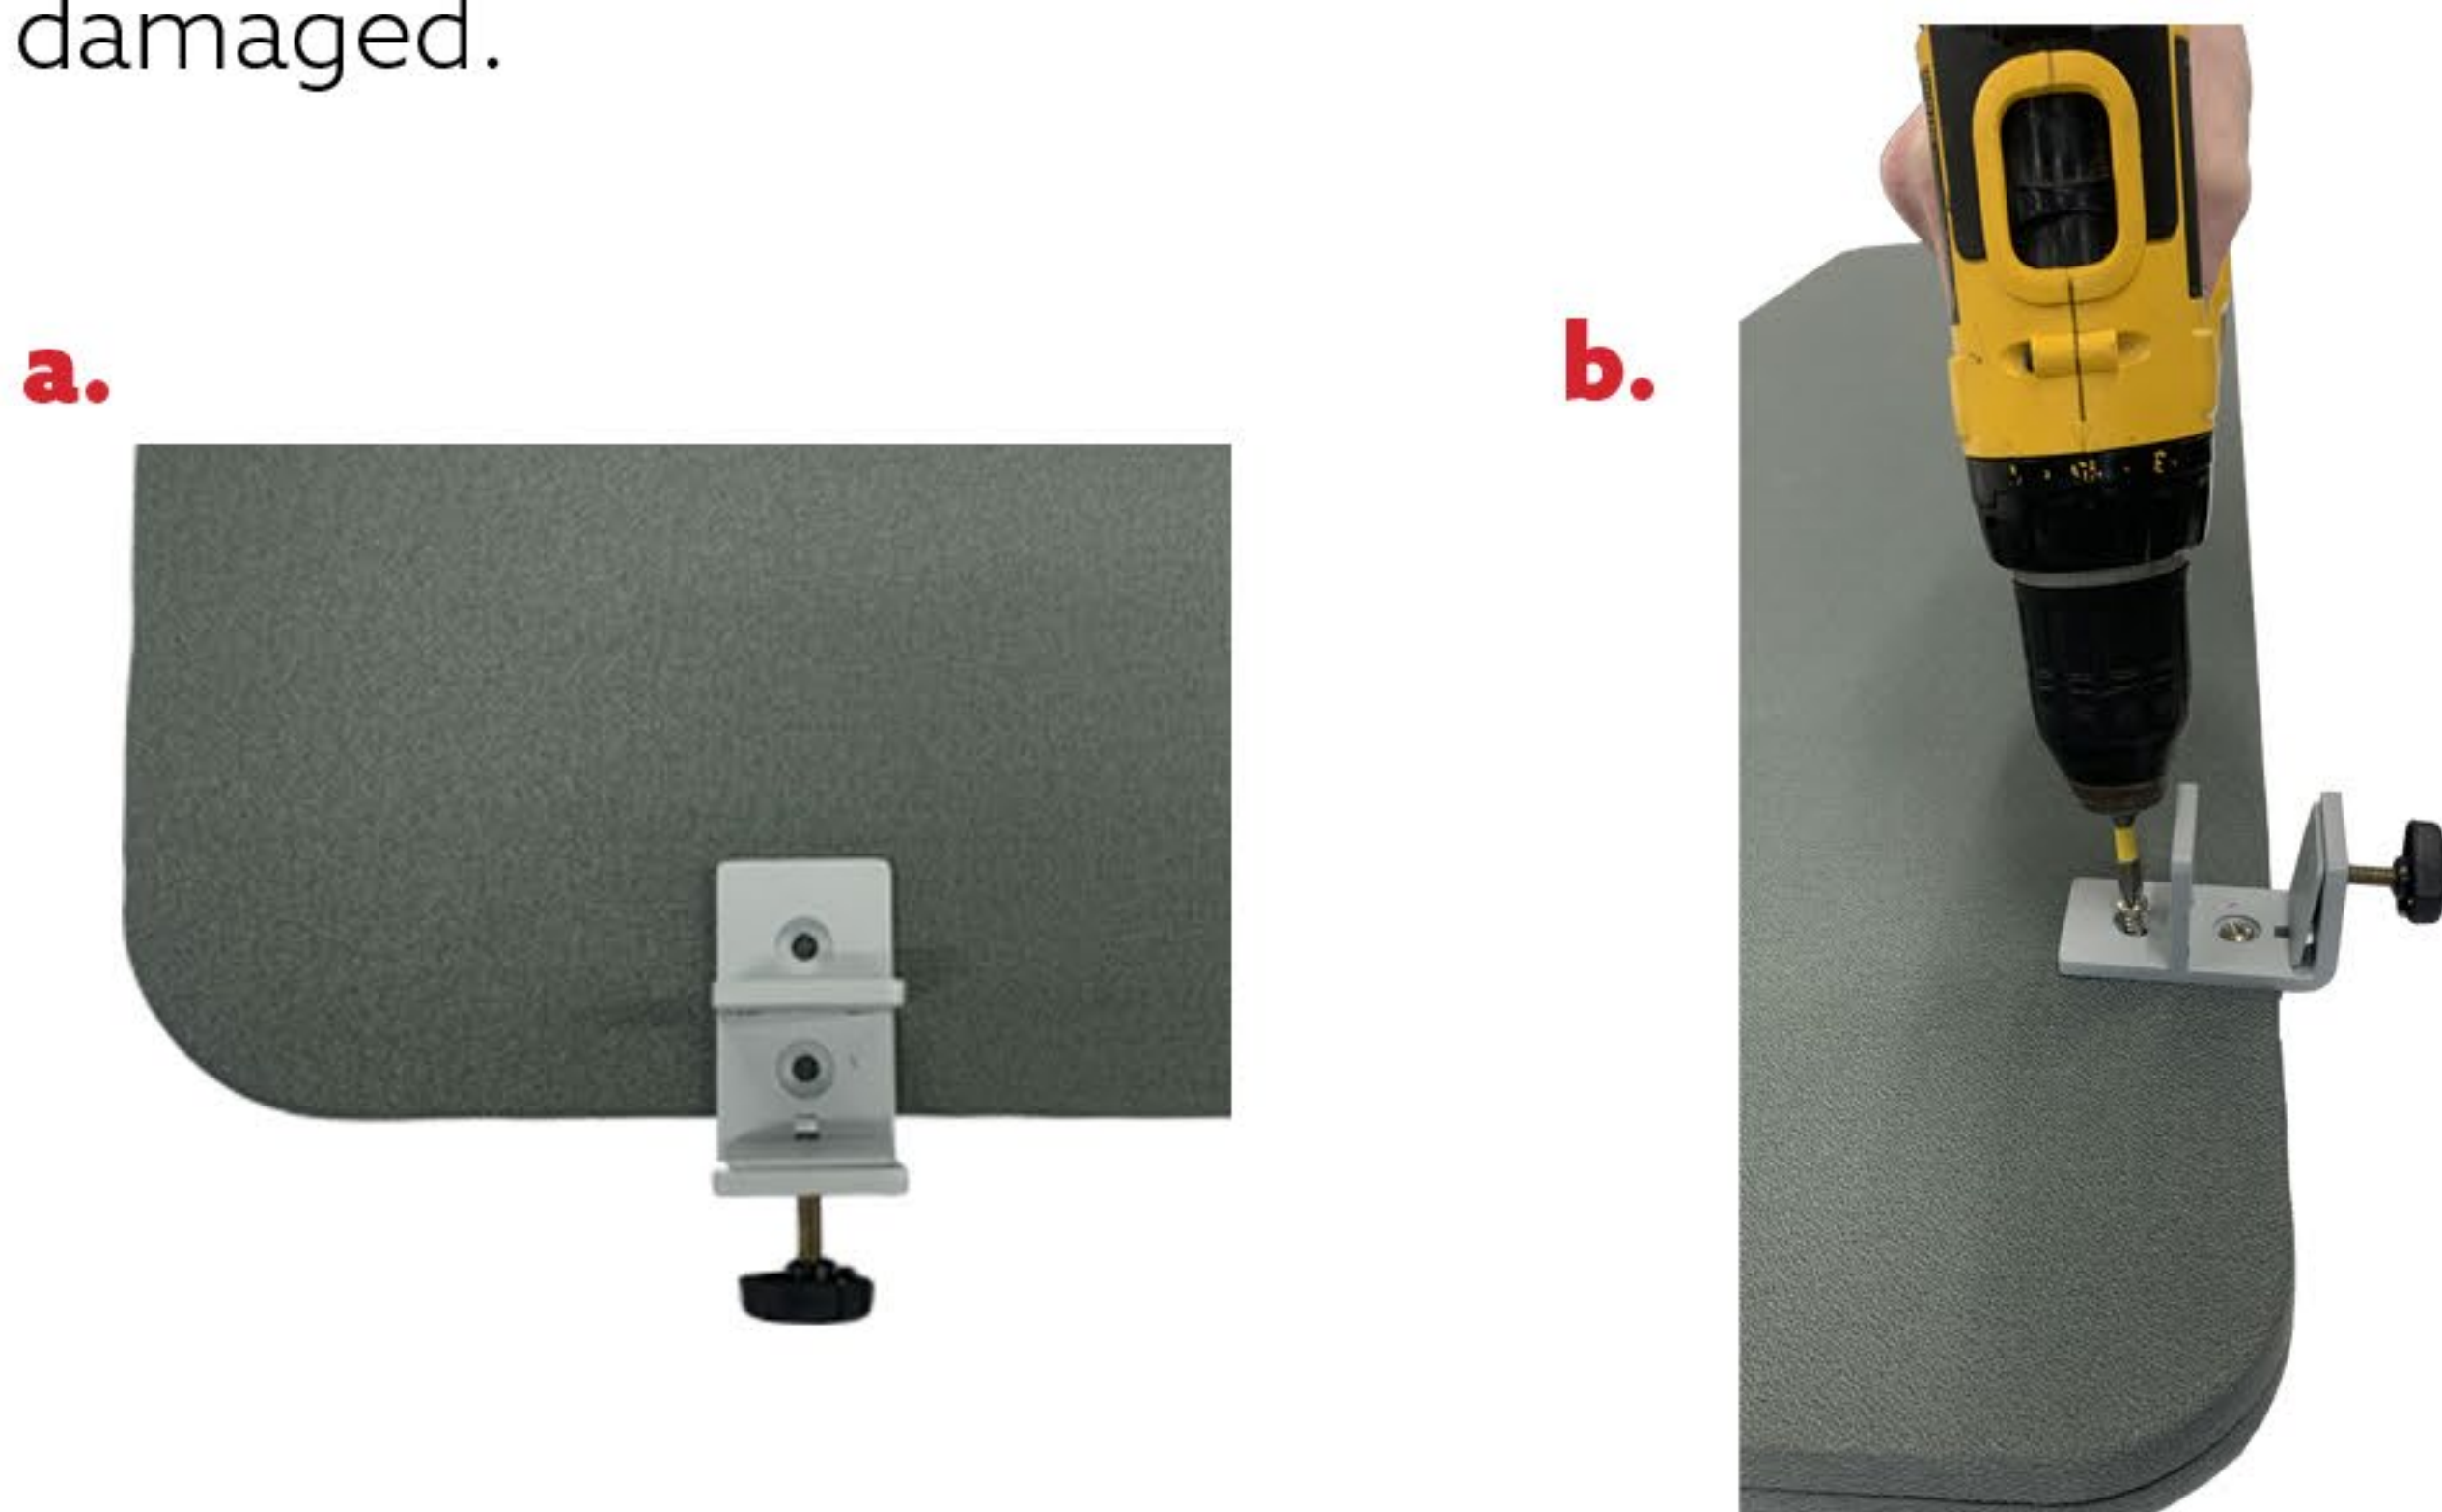

STEP 3

Verify that the location of the brackets will not interfere with the table frame, and double check that all screws are tightened.



STEP 4

Place the clamps of the privacy panel onto the work surface and tighten the connection by turning the black plastic knob until it is tight.



STEP 5

Make sure all connections are tight, and approve the privacy panel for use.



STEP 6

If you have any questions, please contact MiEN Environments at **616-818-1970**